

LPMS

Reference Manual

Version 1.3.3



LPMS-B (Standard / OEM)



LPMS-CU (Standard / OEM)




LPMS-CANAL



LPMS-UARTAL



LPMS-USBAL

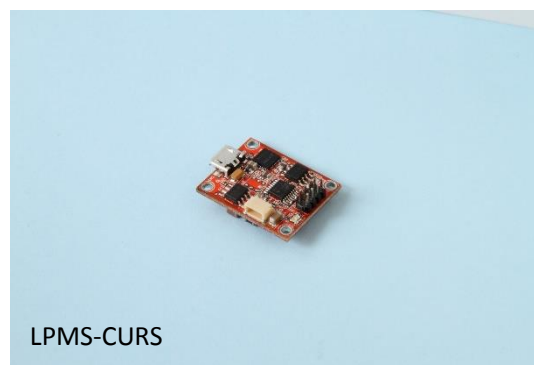

LPMS-CURS

I. INTRODUCTION

Welcome to the LP-RESEARCH Motion Sensor (LPMS) reference manual.

In this manual we will explain everything you need to know to set up the LPMS hardware, install its software and get started with integrating the sensor in your own software project. We have put a lot of effort into making the LPMS a great product, but we are always eager to improve and work on new developments. If you have any further questions or comments regarding this manual please feel free to contact us anytime.

For more information on the LPMS or other product series, please refer to datasheets and user manuals, available from the LP-RESEARCH website at the following address:
<http://www.lp-research.com>.

II. TABLE OF CONTENTS

- I. INTRODUCTION.....2**
- II. TABLE OF CONTENTS3**
- III. DOCUMENT REVISION HISTORY7**
- IV. INTRODUCTION.....8**
 - Measurement Output.....8
 - Technical Background8
 - Communication Methods.....9
 - Calibration9
 - Size and Run-times9
 - Application Areas10
- V. DEVICE SPECIFICATIONS11**
 - Common Parameters for all LPMS Models.....11
 - Device Specific Parameters and Connectors12
 - LPMS-B12
 - LPMS-CU14
 - LPMS-CANAL.....15
 - LPMS-CURS16
 - LPMS-USBAL.....18
- VI. OPERATION.....19**
 - Powering Up and Operation Modes.....19
 - Host Device Communication.....21
 - Bluetooth 2.....21
 - USB.....21
 - CAN Bus.....21
 - RS-232, TTL-level serial22
 - Orientation Data.....23
 - Sensor Orientation Alignment Modes.....25
 - Heading reset25

Object reset	25
Alignment reset	26
Data Acquisition	27
Raw Sensor Data.....	27
Orientation Data.....	27
Filter Settings.....	28
Filter Modes.....	28
Magnetometer Correction Setting.....	29
Acceleration Compensation Setting.....	29
Gyroscope Threshold	29
Gyroscope Auto-calibration Function.....	30
Low Pass Filter Setting	30
Calibration Methods	30
Gyroscope Bias Calibration and Threshold	30
Magnetometer Calibration	31
Multiple-device Synchronization.....	33
Trade-offs and Limitations.....	34
VII. COMMUNICATION PROTOCOL.....	34
LPBUS Protocol	34
GET Commands.....	34
SET Commands	34
Packet Format	35
Data Format in a Packet Data Field	35
Sensor Measurement Data in Streaming Mode.....	36
Example Communication.....	38
Request Sensor Configuration	38
Request Gyroscope Range	39
Set Accelerometer Range.....	40
Read Sensor Data.....	41
ASCII Format Output	42
lpCAN Protocol	42
CANopen and Sequential CAN Protocol.....	44
VIII. OpenMAT LIBRARY	50

Overview.....50

 Introduction.....50

 Application Installation under Windows.....51

LpmsControl Software Operation.....51

 Overview.....51

 GUI Elements51

 Scanning, Discovering and Saving Devices.....56

 Connecting and Disconnecting a Device57

 Recording and Playing Back Data58

 Switching View Modes58

 Uploading New Firmware.....60

The LpSensor Library60

 Building Your Application60

 Important Classes.....61

 Example Code (C++).....68

IX. APPENDIX71

 Appendix A –COMMON CONVERSION ROUTINES.....71

 Conversion Quaternion to Matrix71

 Conversion Quaternion to Euler Angles72

 Appendix B – LPBUS Protocol Command List73

 Acknowledged and Not-acknowledged Identifiers73

 Firmware Update and In-Application-Programmer Upload Commands73

 Configuration and Status Commands73

 Mode Switching Commands.....75

 Data Transmission Commands76

 Register Value Save and Reset Command78

 Reference Setting and Offset Reset Command78

 Self-Test Command79

 IMU ID Setting Command.....79

 Gyroscope Settings Command.....79

 Accelerometer Settings Command.....82

 Magnetometer Settings Command.....83

 Filter Settings Command86

 UART Settings Commands89

 CAN Bus Settings Command90

APPENDIX C – SOFTWARE REVISION HISTORY.....94

APPENDIX D – MECHANICAL DIMENSIONS100

 LPMS-B100

 LPMS-CU101

 LPMS-CANAL.....101

 LPMS-CURS102

 LPMS-USBAL.....102

III. DOCUMENT REVISION HISTORY

Date	Revision	Changes
01-May-2012	1.0	- Initial release.
01-Sep-2012	1.0.11	- Unified manual split into separate versions for LPMS-B and LPMS-CU.
17-Sep-2012	1.0.12	<ul style="list-style-type: none"> - Updates to reflect the latest changes in the firmware command set. - OpenMAT library section contains more details on how to use the binary LpSensor library. - Section on how to compile LpmsControl was removed.
13-Jan-2014	1.2.7	<ul style="list-style-type: none"> - Correction of some bugs on commands list. - Add introduction of advanced gyroscope calibration.
27-July-2014	1.3.0	<ul style="list-style-type: none"> - Sensor orientation data explanation - Offset reset mode explanation - Improved magnetic field calibration explanation - 16-bit and 32-bit transmission modes documentation
3-Sep-2014	1.3.3	<ul style="list-style-type: none"> - Re-unified manual for all LPMS models - Updated command list - Added chapter about orientation calculation details and orientation offset methods - Added chapter about multi-sensor synchronization - Updated LpmsControl explanation, new screenshots - Updated software revision list

IV. INTRODUCTION

Measurement Output

The LP-RESEARCH Motion Sensor (LPMS) is a miniature, multi-purpose inertial measurement unit. We designed the unit to be as small as possible so that it can be used in a wide range of applications, from measuring the human motion to the stabilization of ground vehicles or airplanes. The unit can measure orientation in 360 degrees about all three global axes. Measurements are taken digitally and transmitted to a data analysis system in the form of orientation quaternion or Euler angles. Whereas Euler angles are one way of describing the orientation of an object, a quaternion allows orientation measurement without encountering the so-called Gimbal's lock. This is achieved by using a four-element vector to express orientation around all axes without being limited by singularities. A more in-depth explanation of the quaternion output of the LPMS will follow further on in this manual. Optionally an LPMS can be equipped with a barometric pressure sensor to extend the application range of the sensor and to be used e.g. in connection with a GPS unit for global position measurements.

Technical Background

To measure the orientation of an object, the sensor internally uses three different sensing units (four if the optional pressure sensor is used). These units are micro-electro-mechanical system (MEMS) sensors that integrate complex mechanical and electronic capabilities on a miniaturized device. The units used in the LPMS for orientation determination are a 3-axis gyroscope (detecting angular velocity), a 3-axis accelerometer (detecting the directing of the earth's gravity field) and a 3-axis magnetometer to measure the direction of the earth magnetic field. In principle orientation data about all three room axes can be determined by integrating the angular velocity data from the gyroscope. However through the integration step the error from the gyroscope measurements, although it might be very small, has an exponential influence on the calculation causing the resulting angle values to drift. Therefore we correct the orientation data from the gyroscope with information from the accelerometer (roll and pitch) and magnetometer (yaw) to calculate orientation information of high accuracy and stability while guaranteeing fast sampling rates. We combine the orientation information from the three sensing units using a complementary filter in conjunction with an extended Kalman filter (EKF), resulting in the so-called LP-Filter. The Kalman filter allows us to reduce the measurement error especially in case of regular movements (e.g. human gait analysis, vehicle vibration analysis etc.). The internal sampling and filtering rate of the sensor is 400Hz. The data stream frequency is independent from the sampling and processing rate and can be adjusted depending on the selected communication interface.

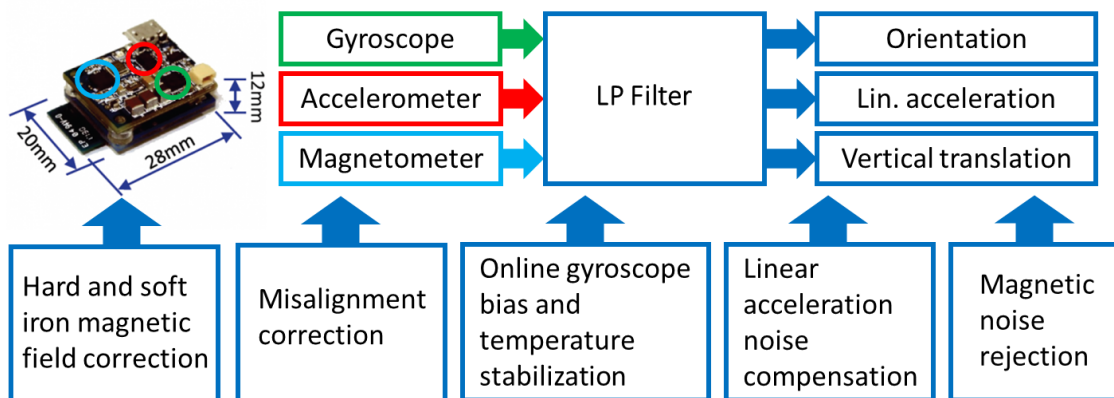


Figure 1 - Overview block diagram of the different components of the LPMS system.

Communication Methods

One of the strengths of the LPMS series is the diversity of offered communication interfaces. LPMS devices can be connected through either Bluetooth 2, Bluetooth Low Energy, USB, CAN bus, RS-232 or TTL-level serial interfaces. Depending on the capabilities of the communication interface users can choose between transmission with our proprietary (but well documented) LPBUS and lpCAN formats, plain ASCII (CSV) format, CANopenor custom CAN protocols.

Calibration

For accurate operation the sensor needs to be calibrated. The calibration procedure includes the determination of gyroscope bias and gain, gyroscope movement threshold, accelerometer misalignment, accelerometer offset and gain, and magnetometer interference bias and gain. As the earth magnetic field can be distorted by metal or electromagnetic sources within the vicinity of the sensor, the re-calibration of the magnetic sensor and re-calculation of the magnetic reference vector of the sensor might be necessary when using the sensor in different locations or under varying experiment environments. Later in this manual we will describe in detail the necessary calibration procedures necessary to guarantee the accuracy of the measurements done by the sensor. We tried to automate the calibration procedures as far as possible inside the firmware of the sensor to make the usage as convenient as possible for users.

To compensate the effects of a noisy earth magnetic field the LPMS is able to dynamically adjust the intensity of the magnetometer compensation to the impact of magnetic environment noise.

Size and Run-times

During development of the LPMS we tried to make the unit as small as possible to allow a large variety of application areas. For size reduction the actual sensing units and microcontroller hardware

are integrated into one main-board with a 6-layer PCB design. The communication hardware interface is implemented on an extension-board, which is stacked above the main-board. Each LPMS consists of these two boards as a whole unit (except the module of LPMS-CURS which has only one board). The main-board contains the actual sensor devices and manages the sensor data acquisition. The extension-board contains the communication hardware to transmit data to a host system

Application Areas

The LPMS is suitable for a wide range of applications. One of the applications focuses for a small scale motion sensor is the measurement of human movement for injury rehabilitation, gait cycle analysis, surgical skill training etc. The sensor can also be effectively used in the field of virtual reality, navigation, robotics, or for measuring vehicle dynamics. If more than one sensor is used for a sensor network the motion of complex objects as necessary in cinematic motion capturing or animation movie production is possible.

V. DEVICE SPECIFICATIONS

Common Parameters for all LPMS Models

Parameter	Value
Orientation measurement range	360° about all axes
Resolution	< 0.05°
Accuracy	< 2° RMS (dynamic), < 0.5°(static)
Accelerometer	3-axis, ±20 / ±40 / ±80 / ±160 m/s ² , 16 bits
Gyroscope	3-axis, ±250 / ±500 / ±2000 °/s, 16 bits
Magnetometer	3-axis, ±130 to ±810 μT, 16 bits
Gyroscope noise	0.02 (dps/√Hz)
Maximum impact resistance	10,000 g
Pressure sensor	300-1100 hPa Pressure sensor is optional for all models
Available output data	Raw data / Euler angle / Quaternion / Linear acceleration / Vertical displacement (optional) / Barometric pressure (optional) / Altitude (optional) / Temperature (optional)
Internal sampling / processing rate	400 Hz

Device Specific Parameters and Connectors

LPMS-B

Specifications

Unit type	LPMS-B (standard)	LPMS-B (OEM version)
Interface type	Bluetooth 2	
Maximum baud rate	921600 Baud	
Communication protocol	LPBUS	
Size	45x 37 x 20 mm	28 x 20 x 12 mm
Weight	34 g	7 g
Bluetooth	2.1 + EDR, 2.412 - 2.484 GHz	
Communication distance	< 18 m	
Maximum data transmission rate	133Hz	
Latency	15 ms	
Power consumption	290 mW @ 3.3V	
Power supply	Lithium battery> 10 h (3.7 V @ 800mAh)	3.6-18V DC
Temperature range	-20..+60 °C	-40..+80 °C
Connector	Micro USB, type B	

LPMS-B Main Connector

Connector type: Micro-USB type B female

Pin no.	1	2	3	4	5
Function	Vcc	None	None	None	GND

NOTE: This connector is used for recharging the LPMS-B battery. Power is internally supplied to the LPMS-B by a rechargeable battery contained inside the LPMS-B case. To recharge the sensor, we supply a specific recharger called LPMS-B recharger.

Recharger Power Supply Connector (Port 1)

Connector type: Micro-USB type B female

Pin no.	1	2	3	4	5
Function	+5V	None	None	None	GND

Recharger Sensor Connector (Port 2)

Connector type: USB type A female

Pin no.	1	2	3	4	5
Function	Vcc	None	None	None	GND

NOTE: See Figure 1 for details on how to connect LPMS-B and the recharging unit.

Charging Status

Red LED	Green LED	Status
On	Off	The battery is being recharged.
Off	On	The battery has been fully charged.
On	On	The recharger is not connected to LPMS-B.

NOTE: If the recharger is powered on and has not been connected to LPMS-B after about 5 minutes, both LEDs will be on to indicate the connection error. The total recharging time normally takes 5 to 6 hours.

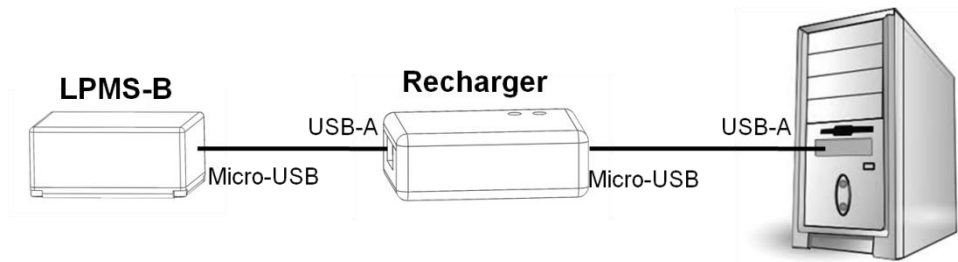


Figure 2 - Connecting the recharger and LPMS-B

LPMS-CU

Specifications

Unit type	LPMS-CU	
Wired Interface	CAN Bus	USB 2.0
Maximum baudrate	1Mbit/s	921.6Kbit/s
Communication protocol	lpCAN / CANopen	LPBUS
Size	37 x 28 x 17 mm	
Weight	12.8 g	
Maximum data transmission rate	400 Hz	
Latency	2.5ms	
Power consumption	165 mW	
Supply voltage (Vcc)	4-18V DC	5V DC
Connector	Micro USB, type B	
Temperature range	-40..+80 °C	

USB Port Connector

Connector type: Micro-USB type B female

Pin no. (USB port)	1	2	3	4	5
Function	+5V	D-	D+	None	GND

NOTE: CAN bus and USB connectors cannot be used at the same time.

CAN Bus Connector

Connector type: Micro-USB type B female

Pin no. (CAN port)	1	2	3	4	5
Function	CAN_V+	CAN_L	CAN_H	None	CAN_GND

NOTE: A 120 Ohm CAN Bus termination resistor is not integrated in LPMS-CU.

LPMS-CANAL

Specifications

Unit type	LPMS-CANAL
Interface type	CAN Bus
Maximum baudrate	1Mbit/s
Communication protocol	lpCAN / CANopen
Size	48 x 40 x 23 mm
Weight	67.5 g
Maximum transmission rate	400 Hz
Latency	2.5 ms
Power consumption	165 mW
Supply voltage (Vcc)	4-18V DC
Connector	SACC-DSI-MS-5CON-PG 9/0,5 SCO, M12
Case material	Aluminum
Temperature range	- 40..+80 °C

CAN Connector

Connector type: Phoenix Contact, SACC-DSI-MS-5CON-PG 9/0,5 SCO, M12

Fitting cable type: Phoenix Contact,SAC-5P- 1,5-PUR/M12FS SH

Pin no.	1	2	3	4	5
Function	CAN_SHLD	CAN_V+	CAN_GND	CAN_H	CAN_L


CAN_SHLD: CAN bus shield

CAN_V+: External positive power supply

CAN_GND: Ground

CAN_H: CAN_H bus line(dominant high)

CAN_L: CAN_L bus line(dominant low)

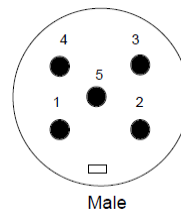

NOTE: A 120 Ohm CAN bus termination resistor is not integrated in LPMS-CANAL.

LPMS-CURS

Specifications


Unit type	LPMS-CURS		
Interface type	CAN Bus	Serial RS232/TTL	USB
Maximum baudrate	1Mbit/s	921.6 Kbit/s	921.6Kbit/s
Communication protocol	CANlp / CANopen	LPBUS / ASCII	LPBUS
Size	28 x 22 x 7 mm		
Weight	4.1 g		
Max. transmission rate	400 Hz		
Latency	2.5 ms		
Power consumption	165 mW		
Supply voltage (Vcc)	4-18V DC		5V DC
Connector	Header pitch 2mm		Micro USB, type B
Temperature range	- 40..+80 °C		

USB Connector

Connector type: Micro-USB type B female

Pin no.	1	2	3	4	5
Function	+5V	D-	D+	None	GND

CAN, RS-232 and TTL serial Connector

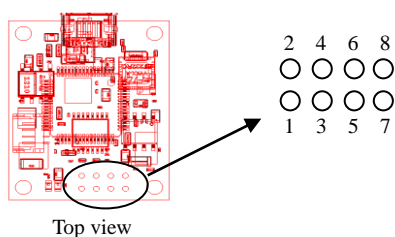

Connector type:8-DIP holes header, pitch 2mm

Pin no.	1	2	3	4
Function	GND	Vin (+4~18V)	TTL: TX	TTL: RX
Pin no.	5	6	7	8
Function	RS232: TX	RS232: RX	CAN+	CAN-

NOTE: A 120 Ohm CAN bus termination resistor is not integrated in LPMS-CURS. Two different

interface connectors cannot be used at the same time.

NOTE: LPMS-CURS is available in different firmware configurations, supporting:

1. CAN bus and USB. Data is streamed via CAN bus at power-on.
2. RS-232 and USB. Data is streamed via RS-232 at power-on.
3. TTL serial and USB. Data is streamed via TTL serial at power-on.

The USB port for all three modules above is for communicating with a PC-based host system.

LPMS-USBAL

Specifications

Sensor type	LPMS-USBAL
Wired Interface	USB 2.0
Maximum baudrate	921.6Kbit/s
Communication protocol	LPBUS
Size	40 x 34 x 17 mm
Weight	36 g
Max. transmission rate	400 Hz
Latency	2.5ms
Power consumption	165 mW @ 5V
Supply voltage (Vcc)	5V DC
Connector	Micro USB, type B
Case material	Aluminum
Temperature range	- 40..+80 °C

USB Connector

Connector type: Micro-USB type B female

Pin no. (USB port)	1	2	3	4	5
Function	+5V	D-	D+	None	GND

VI. OPERATION

Powering Up and Operation Modes

➔ **Applies to LPMS-B**

LPMS-B is switched on by pressing its power button for duration of 1s. The red and green LEDs visible on the side of LPMS-B light up when operation power is supplied to the device. After powering up, the green color status LED will start blinking with an interval of 1s. The sensor is now ready for operation.

➔ **Applies to LPMS-CU, LPMS-CURS, LPMS-CANAL, LPMS-UARTAL, LPMS-USBAL**

The sensor is switched on when operation power is supplied through one of the sensor connectors (depending on the model, see previous chapter for connector pin-outs and ratings). After powering up, the green/orange color status LED will start blinking with an interval of 1s. The sensor is now ready for operation.

NOTE: For the aluminum case version of LPMS (LPMS-CANAL, LPMS-UARTAL, LPMS-USBAL) the LEDs are not visible without opening the case.

Operational state	Red LED	Green LED
Initializing	On	On
Normal operation	On	Blinking (1 Hz)
Firmware update	On	Blinking (10 Hz)
Hardware timestamp reset armed	On	Blinking (4 Hz)

Internally LPMS has two different communication modes:

Mode	Description
Command mode	In command mode the functionality of the sensor is accessed command-by-command. Measurement data is transferred from the sensor to the user by a special command. This mode is suitable for making adjustments to the parameter settings of the sensor and synchronized data-transfer.
Streaming mode (default at power-on)	In streaming mode data is continuously sent from the sensor to the host. This mode is suitable for simple and high-speed data acquisition. Sensor parameters cannot be set in this mode.

NOTE: The sensor is set to **streaming mode by default after powering on**. Command mode may be set via the corresponding LPBUS command. The current operation mode can be saved into sensor flash memory. We will specify the available commands in detail later on in this manual.

➔ **Applies to LPMS-CU, LPMS-CURS CAN version, LPMS-CANAL**

Data is initially streamed via CAN bus. Data communication is switched to USB once the first LPBUS byte has been received through the USB port.

➔ **Applies LPMS-UARTAL, LPMS-CURS RS-232 and TTL versions**

Data is initially streamed via serial port. Data communication is switched to USB once the first LPBUS byte has been received through the USB port.

Host Device Communication

Bluetooth 2

➔ Applies to LPMS-B

To connect to the sensor, a Bluetooth connection request must be sent to the Bluetooth MAC address of LPMS-B. This MAC address is displayed as sensor device ID in the LpmsControl application.

Users should connect to the Bluetooth module of LPMS-B using a standard class 2 Bluetooth host interface that supports SPP (serial protocol profile). A key-code for pairing is not normally required. Should you be asked for a key-code anyway, enter “1234”. Establishing a connection with the sensor usually takes around 2 to 5 seconds. The Bluetooth device name of the sensor for device discovery is LPMS-B. The baudrate of the Bluetooth connection is 921600bit/s.

NOTE: Bluetooth communication always uses the LPBUS binary format for input / output.

USB

➔ Applies to LPMS-CU, LPMS-CURS, LPMS-USBAL

The USB interface of the LPMS-USBAL, LPMS-CU or LPMS-CURS uses a serial-to-USB interface IC by the company FTDI. Drivers for this IC for all major operating systems can be downloaded from their website: <http://www.ftdichip.com/FTDrivers.htm>.

There are two options for communicating with the FTDI chip:

1. By downloading a virtual com port driver (VCP): This driver allows you to see the LPMS as COM port in your operating system. All communication is done using standard COM port access procedures. The default connection baudrate is 912.6Kbit/s, 8N1, with hardware flow control.
2. By accessing the FTDI chip directly using a DLL library: FTDI offers a convenient library that allows users to communicate with their USB interface ICs.

NOTE: USB communication always uses the LPBUS binary format for input / output.

CAN Bus

➔ Applies to LPMS-CU, LPMS-CANAL, LPMS-CURS

Users should be able to communicate with LPMS-CU, LPMS-CANAL or LPMS-CURS using any standard CAN interface. The CAN message uses standard 11 bits identifier and 8 bytes of data.

The default connection baud rate is 125Kbit/s.

CAN bus communication can be switched to one of the following formats:

1. CANopen (default) messages, output only
2. Sequential (custom) CAN messages, output only
3. LPBUS binary format (lpCAN)

NOTE: Format settings can be changed through LpmsControl application or direct LPBUS communication commands.

RS-232, TTL-level serial

→ Applies to LPMS-CURS, LPMS-UARTAL

The UART interface for both, RS232 and TTL-level serial uses a **baud rate default setting of 115200 bit/s**, 8N1, no hardware flow control.

RS-232 and TTL-level serial communication can be switched to one of the following formats:

1. LP-BUS binary (default)
2. ASCII plain text

NOTE: Format settings can be changed through the LpmsControl application or direct LPBUS communication commands.

Orientation Data

The LPMS sensor calculates the orientation difference between a fixed sensor coordinate system and a global reference coordinate system. The local and the global reference coordinate systems used are defined as right handed Cartesian coordinate systems with:

- X positive when pointing to the magnetic west
- Y positive when pointing to the magnetic south
- Z positive when pointing up (gravity points vertically down with -1g)

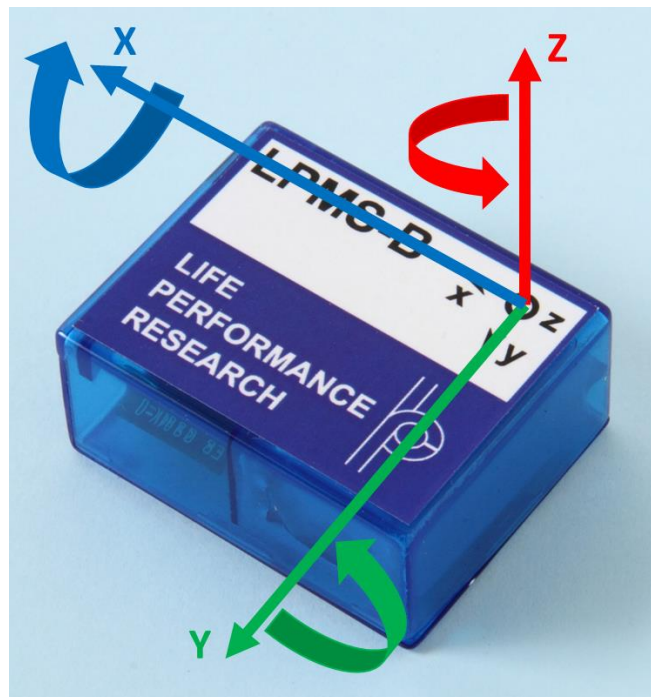


Figure 3 - Axis orientation of LPMS-B. The direction of the x, y, z-axis (roll, pitch, yaw) of the sensor is displayed on its label.

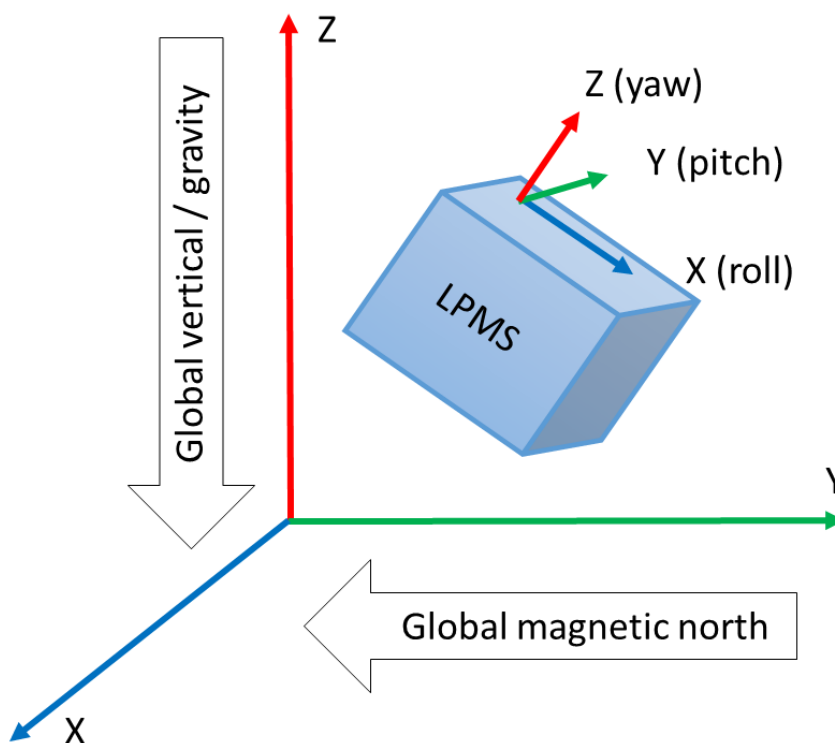


Figure 4 - Relationship between local sensor coordinate system and global coordinates.

See Figure 3 and Figure 4 displaying the orientation and relationship of local sensor and earth global coordinate systems. The 3D orientation output is defined as the orientation between the body-fixed coordinate system and the global coordinate system, using the global coordinate system as reference.

A positive rotation is always right-handed, i.e. defined according to the right hand rule (corkscrew rule). This means a positive rotation is defined as clockwise in the direction of the axis of rotation.

The definition used for Euler angles in this document is equivalent to roll, pitch, yaw/heading. The Euler angles are of XYZ global type (subsequent rotation around global X, Y and Z axis, also known as aerospace sequence).

ϕ = Rotation around global X, defined from $-180^\circ \dots 180^\circ$

θ = Rotation around Y, defined from $-90^\circ \dots 90^\circ$

ψ = Rotation around Z, defined from $-180^\circ \dots 180^\circ$

NOTE: Due to the definition of Euler angles there is a mathematical singularity when the sensor-fixed X-axis is pointing up or down in the global reference frame (i.e. pitch approaches $\pm 90^\circ$).

This singularity is not present in quaternion output.

Sensor Orientation Alignment Modes

Heading reset

Often it is important that the global Z-axis remains along the vertical (defined by local gravity vector), but the global X-axis has to be in a particular direction. In this case a heading reset may be used. When performing a heading reset, the new global reference frame is chosen such that the global X-axis points in the direction of the sensor while keeping the global Z-axis vertical (along gravity, pointing upwards). In other words: The global Z-axis point upwards along gravity, where the X and Y axis orthogonally form a perpendicular plane.

NOTE: After a heading reset, the yaw may not be exactly zero, this occurs especially when the X-axis is close to the vertical. This is caused by the definition of the yaw when using Euler angles, which becomes unstable when the pitch approaches +/-90 deg.

Object reset

The object reset function aims to facilitate in aligning the LPMS coordinate frame (S) with the coordinate frame of the object to which the sensor is attached (O). After an object reset, the S coordinate frame is changed to S' as follows:

The S' Z-axis is the vertical (up) at time of reset

The S' X-axis equals the S X-axis, but projected on the new horizontal plane.

The S' Y-axis is chosen as to obtain a right handed coordinate frame.

NOTE: Once this object reset is done, both calibrated data and orientation will be output in the new coordinate frame (S').

The object reset aligns the LPMS coordinate frame to that of the object to which it is attached (see Figure 5). The sensor has to be attached in such a way that the X-axis is in the XZ-plane of the object coordinate frame, i.e. the LPMS can be used to identify the X-axis of the object. To preserve the global vertical, the object must be oriented such that the object Z-axis is vertical. The object reset causes the new S' coordinate frame and the object coordinate frame to be aligned.

NOTE: Since the sensor X-axis is used to describe the direction of the object X-axis, the reset will not work if the sensor X-axis is aligned along the Z-axis of the object.

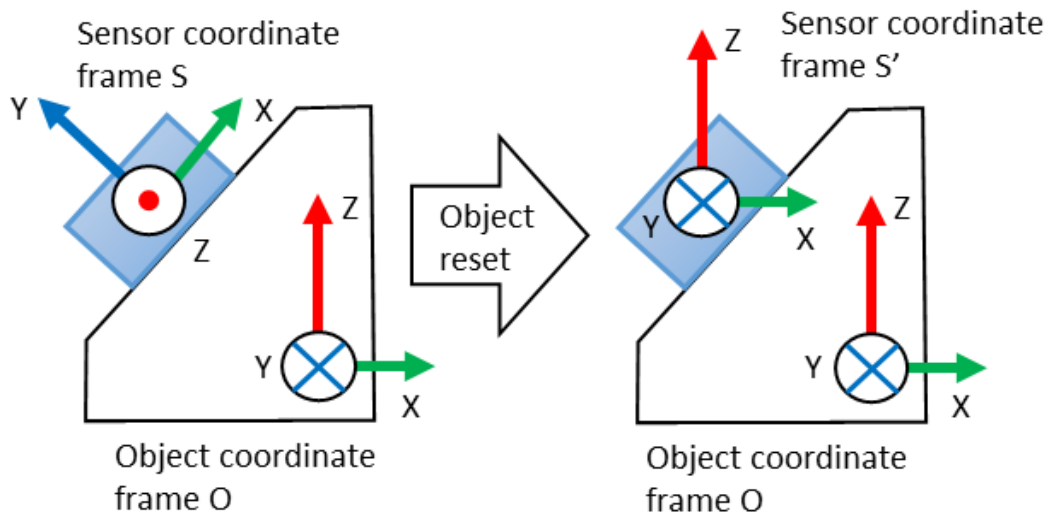


Figure 5 - The object reset aligns the sensor coordinate system with the object coordinate system.

Alignment reset

The alignment reset simply combines the Object reset and the Heading reset at a single instant in time. This has the advantage that all coordinate systems can be aligned with a single action. Keep in mind that the new global reference X-axis (heading) is defined by the object X-axis (to which XZ-plane you have aligned the LPMS).

NOTE: Once this alignment reset is conducted, both calibrated data and orientation will be output with respect to the new S' coordinate frame.

Data Acquisition

Raw Sensor Data

The LPMS contains three MEMS sensors: A gyroscope, an accelerometer and a magnetometer. The raw data from all three of these sensors can be accessed by the host system based on the LPBUS protocol. The raw sensor data can be used to check if the current acquisition range of the sensors is sufficient and if the different sensors generate correct output. Users can also implement their own sensor fusion algorithms using the raw sensor data values. Sensor range and data sampling speed can be set by sending commands to the firmware.

The LPMS is delivered in a factory-calibrated state, but it might be necessary to recalibrate the sensors if the measurement environment changes (different ambient electromagnetic field, strong temperature change). Please refer to the following sections for a detailed introduction of sensor calibration methods.

- 1. Gyroscope raw data:** Data from sensor is calibrated (bias, scaling and misalignment applied)
- 2. Accelerometer raw data:** Data from sensor is calibrated (bias, scaling and misalignment applied)
- 3. Magnetometer raw data:** Data from sensor is scaled, but not hard / soft iron calibrated (scaling and misalignment applied)

Orientation Data

The LPMS has two orientation output formats: quaternion and Euler angle. As the Euler angle representation of orientation is subject to the Gimbal lock, we strongly recommend users to rely on quaternion representation for orientation calculation.

Filter Settings

Data from the three MEMS sensors is combined using an extended complementary Kalman filter (LP-Filter) to calculate the orientation data, like quaternion and Euler angle. To make the filter operate correctly, its parameters need to be set in an appropriate way.

Filter Modes

The selection of the right filter mode is essential for a good performance of the orientation calculation. The following filter modes are available:

Filter mode	Description
Gyroscope only	This mode uses only gyroscope data to calculate sensor orientation. Pro: Very responsive, Low noise Con: Accumulating offset due to integration of gyroscope bias error
Gyroscope + accelerometer (default mode)	Gyroscope-based orientation values are stabilized by accelerometer measurements in the pitch and roll axis. Pro: No drift on the pitch and roll axis Con: Drift on yaw axis, slightly longer stabilization times than pure gyroscope calculation
Gyroscope + accelerometer + magnetometer	Gyroscope-based orientation values are stabilizes by accelerometer measurements in the pitch and roll axis and by magnetometer measurements in the yaw axis. Pro: No drift on all axes, especially in noise-free environment Con: Prone to magnetic noise, slightly longer stabilization times than pure gyroscope calculation, calibration necessary
Accelerometer + magnetometer (Euler only)	Orientation is calculated by Euler-angle based triangulation. Pro: No drift (especially in noise-free environment), fast, no misalignment offset Con: Singularities due to Euler-angle-based calculation, prone to magnetic noise, prone to linear acceleration noise, calibration necessary
Gyroscope + accelerometer (Euler only)	Gyroscope-based orientation values are stabilized by accelerometer measurements in the pitch and roll axis. Pro: No drift on the pitch and roll axis Con: Singularities due to Euler-angle-based calculation, drift on yaw axis, slightly longer stabilization times than pure gyroscope calculation

Magnetometer Correction Setting

The amount by which the magnetometer corrects the orientation output of the sensor is controlled by the magnetic correction settings. The following options are selectable through LpmsControl or directly through the firmware commands.

Parameter presets	Description
Dynamic (default)	Magnetic correction is performed dynamically. The stronger the detected magnetic noise the less the sensor will rely on magnetometer data.
Weak	Low reliance on magnetometer correction
Medium	Medium reliance on magnetometer correction
Strong	Strong reliance on magnetometer correction

Acceleration Compensation Setting

The amount by which the accelerometer corrects the orientation output of the sensor is controlled by both linear acceleration and centripetal acceleration settings. The following options are selectable through LpmsControl or directly through firmware commands.

Linear Acceleration Correction Settings

Parameter presets	Description
Off	No linear acceleration correction
Weak	Weak linear acceleration correction
Medium (default)	Strong reliance on magnetometer correction
Strong	Medium reliance on magnetometer correction
Ultra	Very strong reliance on magnetometer correction

Rotational Acceleration Correction Settings

Parameter presets	Description
Disable	No centripetal acceleration correction
Enable (default)	Centripetal acceleration correction is on

Gyroscope Threshold

A threshold can be applied to the gyroscope data so that the sensor orientation data is only updated when the sensor is moved.

Parameter preset	Description
------------------	-------------

Enable	Switches gyroscope threshold on
Disable (default)	Switches gyroscope threshold off

Gyroscope Auto-calibration Function

As described earlier in this manual the selection of the following parameter values allows the users to enable or disable the gyroscope auto calibration function. In auto calibration mode the sensor fusion filter automatically detects if the sensor is in a stable / motion-less state. If the sensor stays still for 7.5s, the currently sampled gyroscope data will be used to re-calculate the gyroscope offset. Using this function will enhance the accuracy of the gyroscope data in especially in changing temperature environments.

Parameter preset	Description
Enable	Switch gyroscope auto-calibration on
Disable	Switch gyroscope auto-calibration off

Low Pass Filter Setting

The selection of the following parameter values allows the users to further implement a simple low pass filter for smoothing the output data after the sensor fusion algorithm. The low pass filter is based on the following formula: $X_i = (1-a)*X_{i-1} + a*U_i$, where a is the coefficient listed in the following table, U is the input.

Parameter preset	Description
Off	No filter implemented
0.1	$a = 0.1$
0.05	$a = 0.05$
0.01	$a = 0.01$
0.005	$a = 0.005$
0.001	$a = 0.001$

Calibration Methods

Gyroscope Bias Calibration and Threshold

When the sensor is resting, the output data of the gyroscope should be close to 0. The raw data from the gyroscope sensor has a constant bias of a certain value. This is related to the mechanical structure of the gyroscope MEMS, which can slightly change its characteristics depending e.g. on the environment temperature. There are two ways to determine the gyroscope bias:

1. **Automatic calibration:** If the sensor is in a motion-less state for more than 7.5s the gyroscope bias will be automatically readjusted.

2. **Manual calibration:** To determine the bias value manually the following calibration procedure needs to be applied. Alternatively to calibration from the LpmsControl application, the calibration can also be triggered through direct communication with the sensor.

Step	Description
1	Put the sensor in a resting (non-moving) position
2	Trigger the gyroscope calibration procedure either through a firmware command or using the “Calibrate gyroscope” function in LpmsControl software
3	The gyroscope calibration will take around 30s. After that the gyroscope is calibrated, normal operation can be resumed

The **gyroscope threshold** will set up an angular speed limit, below which the LPMS will not process any motion data. This setting can be used to suppress noise or vibrations that might impact the sensor measurements. Users should be careful when applying this functionality, though, as motion information below the threshold will be lost and this might significantly reduce the accuracy of the overall orientation measurement.

Magnetometer Calibration

During the magnetometer calibration procedure several parameters about the magnetic environment close to the sensor are to be determined: magnetometer bias / gain on the X, Y and Z-axis and length / direction of the local geomagnetic field vector. In most environments the earth magnetic field is influenced by electromagnetic noise sources such as power lines, metal etc. As a result the magnetic field becomes de-centered and deformed.

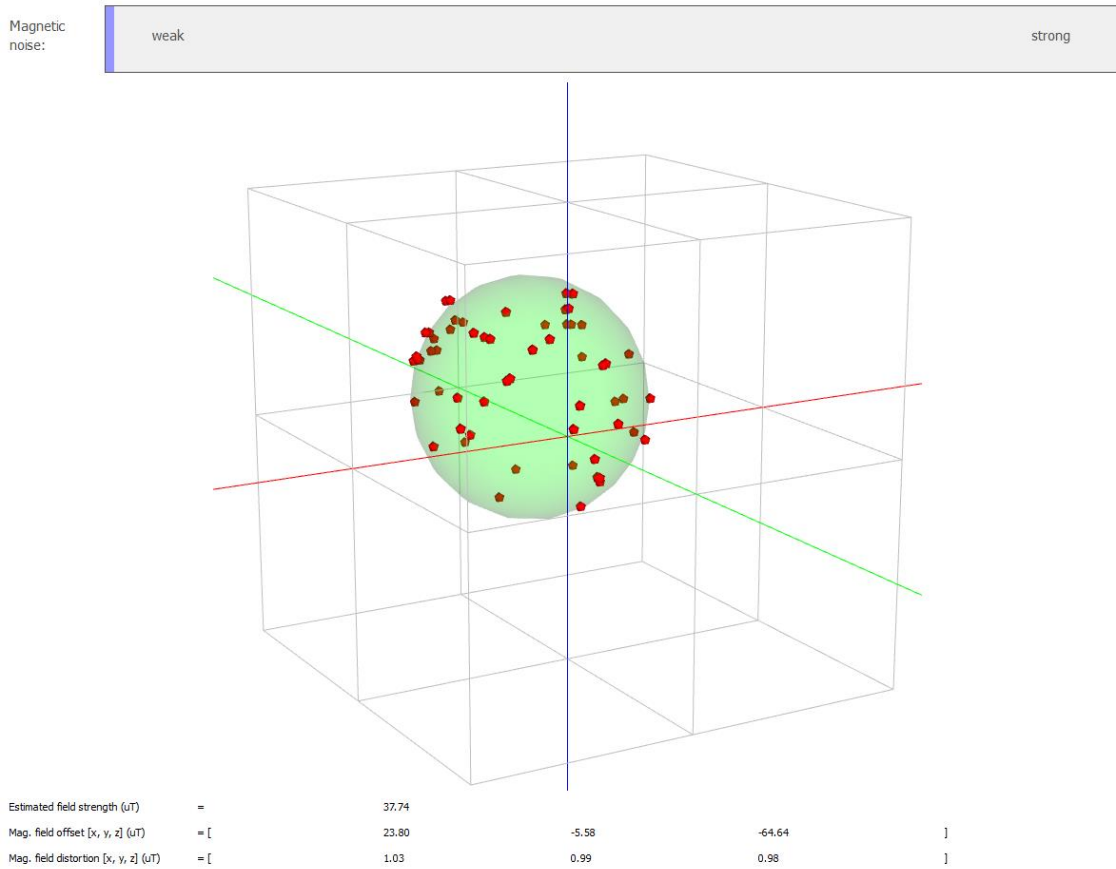


Figure 6 - Result of a successful magnetometer calibration. The green ellipsoid fit should be relatively close to the red points of the magnetic field map. The magnetic noise indicator should be very low in vicinity of the place where the calibration was done.

During the magnetometer calibration the amount of this deformation as well as the average length of the magnetic field vector is calculated. This is usually also referred to as **hard-iron and soft-iron calibration**. These parameters are tuned automatically using the calibration procedures in the LpmsControl software:

Step	Description
1	Start the magnetometer calibration using the LpmsControl software (Calibration -> Calibrate mag.).
2	Follow the instructions of the calibration wizard. Rotate the sensor around its yaw axis for 2-3 rotations.
3	Rotate the sensor around its pitch axis for 2-3 rotations.
4	Rotate the sensor around its roll axis for 2-3 rotations.
5	Rotate the sensor randomly to acquire data as much as possible from different directions.

6	The collection of the field map data is finished after 40 seconds. This is followed by calculation of the geomagnetic field vector (local earth magnetic field inclination). Keep the sensor close to the calibration location and press the Next button in the calibration wizard.
7	After 10 seconds the calibration is complete.

There are two methods for calibrating the hard iron offset and soft iron matrix:

1. Ellipsoid fit: Parameters are calculated by creating a map of the environment field and then fitting an ellipsoid through the point data. The point cloud after rotating the sensor around its axes should look similar to Figure 6.

2. Min / max fit: Parameters are calculated by measuring the minimum and maximum field values for each axis during the sensor rotation process. This method can in principle be used for planar magnetometer calibration. This is important in cases where the magnetometer is fixed to a reference frame that can't be rotated around all axes e.g. a car.

NOTE: The calculations for the magnetometer calibration are currently executed within the LpSensor library running on the host. They can't be triggered directly from communication commands on the sensor.

Multiple-device Synchronization

→ Applies to LPMS-B

Because of the unreliable timing of a Bluetooth connection, multiple LPMS-B cannot be accurately synchronized over-the-air. LPMS-B offers functionality to use one of its digital IO lines to synchronize with a trigger signal.

To manually reset the timestamp of LPMS-B to 0, please follow the steps below:

1. Arm manual timestamp reset via LpmsControl or LPBUS command 83 (SET_ARM_HARDWARE_TIMESTAMP_RESET). The green status LED of LPMS-B should now be blinking at 4Hz.
2. Trigger a timestamp reset by connecting pin 2 of the re-charging connector of LPMS-B to GND. At the moment of the trigger, the sensor timestamp will be reset to 0. The maximum delay to occur between trigger and timestamp reset is 2.5ms.

→ Applies to all models

The LPMS timestamp will be reset to 0 automatically after 10737418.2375 seconds.

Trade-offs and Limitations

Although we put a lot of effort into the design of the LPMS, there are a few limitations that need to be taken into account when using the sensor. The accuracy of the sensor is limited by the electronic noise level of the MEMS sensors. The system runs at an internal measurement and processing frequency of 400Hz. The parameters of the filter that fuses the data from the gyroscope, magnetometer and accelerometer need to be adjusted well, in order to achieve measurements with maximum accuracy. Furthermore, in case the sensor is used in changing environments, the sensor occasionally might need to be re-calibrated. The greatest drawback of the measurement principle of the sensor certainly is its sensitivity to a noisy earth magnetic field (e.g. in the vicinity of hard / soft iron, electric motors etc.). In such situations the use of the filter mode and parameters of the filter must be well considered. In case of LPMS-B, battery run-times should be taken into account when planning usage of the sensor for a new application. Furthermore, the wireless Bluetooth connection puts a limit on the maximum range and the maximum data update frequency.

VII. COMMUNICATION PROTOCOL

LPBUS Protocol

LPBUS is a communication protocol based on the industry standard MODBUS protocol. It is the default communication format used by LPMS devices.

An LPBUS communication packet has two basic command types, GET and SET, that are sent from a host (PC, mobile data logging unit etc.) to a client (LPMS device). Later in this manual we will show a description of all supported commands to the sensor, their type and transported data.

GET Commands

Data from the client is read using GET requests. A GET request usually contains no data. The answer from the client to a GET request contains the requested data.

SET Commands

Data registers of the client are written using SET requests. A SET command from the host contains the data to be set. The answer from the client is either ACK(acknowledged) for a successful write, or NACK(not acknowledged) for a failure to set the register occurred.

Packet Format

Each packet sent during the communication is based on the following structure:

Byte #	Name	Description
0	Packet start (3Ah)	Data packet start
1	OpenMATID byte 1	Contains the low byte of the OpenMAT ID of the sensor to be communicated with. The default value of this ID is 1. The host sends out a GET / SET request to a specific LPMS sensor by using this ID, and the client answers to request also with the same ID. This ID can be adjusted by sending a SET command to the sensor firmware.
2	OpenMAT ID byte 2	High byte of the OpenMAT ID of the sensor.
3	Command # byte 1	Contains the low byte of the command to be performed by the data transmission.
4	Command # byte 2	High byte of the command number.
5	Packet data length byte 1	Contains the low byte of the packet data length to be transmitted in the packet data field.
6	Packet data length byte 2	High byte of the data length to be transmitted.
x	Packet data(<i>n</i> bytes)	If data length <i>n</i> not equal to zero, $x = 6+1, 6+2 \dots 6+n$. Otherwise $x = \text{none}$. This data field contains the packet data to be transferred with the transmission if the data length not equals to zero, otherwise the data field is empty.
7+n	LRC byte 1	The low byte of LRC check-sum. To ensure the integrity of the transmitted data the LRC check-sum is used. It is calculated in the following way: $LRC = \text{sum}(\text{packet byte no. } 1 \text{ to no. } x)$ The calculated LRC is usually compared with the LRC transmitted from the remote device. If the two LRCs are not equal, and error is reported.
8+n	LRC byte 2	High byte of LRC check-sum.
9+n	Termination byte 1	0Dh
10+n	Termination byte 2	0Ah

Data Format in a Packet Data Field

Generally data is sent in little-endian format, low order byte first, high order byte last. Data in the

data fields of a packet can be encoded in several ways, depending on the type of information to be transmitted. In the following we list the most common data types. Other command-specific data types are explained in the command reference.

Identifier	Description
Int32	32-bit signed integer value
Int16	16-bit signed integer value
Float32	32-bit float value
Vector3f	3 element 32-bit float vector
Vector3i16	3 element 16-bit signed integer vector
Vector4f	4 element 32-bit float vector
Vector4i16	4 element 16-bit signed integer vector
Matrix3x3f	3x3 element float value matrix

Sensor Measurement Data in Streaming Mode

In streaming mode, LPBUS transports measurement data in the following form, wrapped into the standard LPBUS protocol. See the following chapter for examples of transmission packets. The order of the sensor data chunks depends on which sensor data is switched on

The following is the data types in **32-bit float transmission mode**.

In 32-bit float transmission mode:

Chunk #	Data type	Sensor data
1	Float32	Timestamp (ms)
2	Vector3f	Calibrated gyroscope data(deg/s)
3	Vector3f	Calibrated accelerometer data(m/s ²)
4	Vector3f	Calibrated magnetometer data(μT)
5	Vector3f	Angular velocity (rad/s)
6	Vector4f	Orientation quaternion(normalized)
7	Vector3f	Euler angle data (rad)
8	Vector3f	Linear acceleration data (m/s ²)
9	Float32	Barometric pressure (mPa)
10	Float32	Altitude (m)
11	Float32	Temperature (°C)
12	Float32	Heave motion (m) (optional)

In **16-bit transmission mode** values are transmitted to the host with a multiplication factor applied to increase precision:

Order #	Data type	Sensor data	Factor
1	Vector3i16	Timestamp (ms)	1000
2	Vector3i16	Calibrated gyroscope data(deg/s)	1000
3	Vector3i16	Calibrated accelerometer data(m/s ²)	1000
4	Vector3i16	Calibrated magnetometer data(μT)	100
5	Vector3i16	Angular velocity (rad/s)	1000
6	Vector4i16	Orientation quaternion(normalized)	1000
7	Vector3i16	Euler angle data (rad)	1000
8	Vector3i16	Linear acceleration data (m/s ²)	1000
9	Int16	Barometric pressure (mPa)	100
10	Int16	Altitude (m)	100
11	Int16	Temperature (°C)	100
12	Int16	Heave motion (m) (optional)	1000

The following units are used for measured and processed sensor data:

Data type	Units
Angular velocity (gyroscope)	rad/s
Acceleration (accelerometer)	g
Magnetic field strength (magnetometer)	μT
Euler angle	radians
Linear acceleration	g
Quaternion	normalized units
Barometric pressure	mPa
Altitude	m
Temperature	°C

NOTE: Raw accelerometer data is transmitted with misalignment correction and scaling to m/s² units applied. Raw gyroscope data is transmitted with misalignment correction, bias correction and scaling to rad/s applied. Raw magnetometer data is transmitted with misalignment correction and scaling to μT applied, **hard and soft iron calibration is not applied to raw magnetometer data transmitted directly from sensor.**

Example Communication

In this section we will show a few practical examples of communication using the LPBUS protocol. For further practical implementation ideas check the open source code of LpmsControl and LpSensor.

Request Sensor Configuration

GET request (HOST -> SENSOR)

Packet byte no.	Content	Meaning
0	3Ah	Packet start
1	01h	OpenMAT ID LSB (ID = 1)
2	00h	OpenMAT ID MSB
3	04h	Command no. LSB (4d = GET_CONFIG)
4	00h	Command no. MSB
5	00h	Data length LSB (GET command = no data)
6	00h	Data length MSB
7	05h	Check sum LSB
8	00h	Check sum MSB
9	0Dh	Packet end 1
10	0Ah	Packet end 2

Reply data (SENSOR -> HOST)

Packet byte no.	Content	Meaning
0	3Ah	Packet start
1	01h	OpenMAT LSB (ID = 1)
2	00h	OpenMAT MSB
3	04h	Command no. LSB (4d = GET_CONFIG)
4	00h	Command no. MSB
5	04h	Data length LSB (32-bit integer = 4 bytes)
6	00h	Data length MSB
7	xxh	Configuration data byte 1 (LSB)
8	xxh	Configuration data byte 2
9	xxh	Configuration data byte 3
10	xxh	Configuration data byte 4 (MSB)
11	xxh	Check sum LSB
12	xxh	Check sum MSB

13	0Dh	Packet end 1
14	0Ah	Packet end 2

xx = Value depends on the current sensor configuration.

Request Gyroscope Range

GET request (HOST -> SENSOR)

Packet byte no.	Content	Meaning
0	3Ah	Packet start
1	01h	OpenMAT ID LSB (ID = 1)
2	00h	OpenMAT ID MSB
3	1Ah	Command no. LSB (26d = GET_GYR_RANGE)
4	00h	Command no. MSB
5	00h	Data length LSB (GET command = no data)
6	00h	Data length MSB
7	1Bh	Check sum LSB
8	00h	Check sum MSB
9	0Dh	Packet end 1
10	0Ah	Packet end 2

Reply data (SENSOR -> HOST)

Packet byte no.	Content	Meaning
0	3Ah	Packet start
1	01h	OpenMAT ID LSB (ID = 1)
2	00h	OpenMAT ID MSB
3	1Ah	Command no. LSB (26d = GET_GYR_RANGE)
4	00h	Command no. MSB
5	04h	Data length LSB (32-bit integer = 4 bytes)
6	00h	Data length MSB
7	xxh	Range data byte 1 (LSB)
8	xxh	Range data byte 2
9	xxh	Range data byte 3
10	xxh	Range data byte 4 (MSB)
11	xxh	Check sum LSB
12	xxh	Check sum MSB
13	0Dh	Packet end 1

14	0Ah	Packet end 2
----	-----	--------------

xx = Value depends on the current sensor configuration.

Set Accelerometer Range

SET request (HOST -> SENSOR)

Packet byte no.	Content	Meaning
0	3Ah	Packet start
1	01h	OpenMAT ID LSB (ID = 1)
2	00h	OpenMAT ID MSB
3	1Fh	Command no. LSB (31d = SET_ACC_RANGE)
4	00h	Command no. MSB
5	04h	Data length LSB (32-bit integer = 4 bytes)
6	00h	Data length MSB
7	08h	Range data byte 1 (Range indicator 8g = 8d)
8	00h	Range data byte 2
9	00h	Range data byte 3
10	00h	Range data byte 4
11	2Bh	Check sum LSB
12	00h	Check sum MSB
13	0Dh	Packet end 1
14	0Ah	Packet end 2

Reply data (SENSOR -> HOST)

Packet byte no.	Content	Meaning
0	3Ah	Packet start
1	01h	OpenMAT ID LSB (ID = 1)
2	00h	OpenMAT ID MSB
3	00h	Command no. LSB (0d = REPLY_ACK)
4	00h	Command no. MSB
5	00h	Data length LSB (ACK reply = no data)
6	00h	Data length MSB
11	01h	Check sum LSB
12	00h	Check sum MSB
13	0Dh	Packet end 1
14	0Ah	Packet end 2

Read Sensor Data

Get request (HOST -> SENSOR)

Packet byte no.	Content	Meaning
0	3Ah	Packet start
1	01h	OpenMAT ID LSB (ID = 1)
2	00h	OpenMAT MSB
3	09h	Command no. LSB (9d = GET_SENSOR_DATA)
4	00h	Command no. MSB
5	00h	Data length LSB (GET command = no data)
6	00h	Data length MSB
7	0Ah	Check sum LSB
8	00h	Check sum MSB
9	0Dh	Packet end 1
10	0Ah	Packet end 2

Reply data (SENSOR -> HOST)

Packet byte no.	Content	Meaning
0	3Ah	Packet start
1	01h	OpenMAT ID LSB (ID = 1)
2	00h	OpenMAT ID MSB
3	09h	Command no. LSB (9d = GET_SENSOR_DATA)
4	00h	Command no. MSB
5	34h	Data length LSB (56 bytes)
6	00h	Data length MSB
7-10	xxxxxxxxh	Timestamp
11-14	xxxxxxxxh	Gyroscope data x-axis
15-18	xxxxxxxxh	Gyroscope data y-axis
19-22	xxxxxxxxh	Gyroscope data z-axis
23-26	xxxxxxxxh	Accelerometer x-axis
27-30	xxxxxxxxh	Accelerometer y-axis
31-34	xxxxxxxxh	Accelerometer z-axis
35-38	xxxxxxxxh	Magnetometer x-axis
39-42	xxxxxxxxh	Magnetometer y-axis
43-46	xxxxxxxxh	Magnetometer z-axis

47-50	xxxxxxxh	Orientation quaternion q0
51-54	xxxxxxxh	Orientation quaternion q1
55-58	xxxxxxxh	Orientation quaternion q2
59-62	xxxxxxxh	Orientation quaternion q3
63	xxh	Check sum LSB
64	xxh	Check sum MSB
65	0Dh	Message end byte 1
66	0Ah	Message end byte 2

xx = Value depends on the current configuration and measurement value.

ASCII Format Output

In ASCII output mode sensor data is transmitted as plain ASCII numerical text. The output format for each number is generally 16-bit integer, but with a multiplication factor applied to increase precision. The following multiplication factors are used:

Chunk#	Data type	Sensor data	Factor
1	Vector3i16	Timestamp (ms)	1000
2	Vector3i16	Calibrated gyroscope data(deg/s)	1000
3	Vector3i16	Calibrated accelerometer data(m/s ²)	1000
4	Vector3i16	Calibrated magnetometer data(μT)	100
5	Vector3i16	Angular velocity (rad/s)	1000
6	Vector4i16	Orientation quaternion(normalized)	1000
7	Vector3i16	Euler angle data (rad)	1000
8	Vector3i16	Linear acceleration data (m/s ²)	1000
9	Int16	Barometric pressure (mPa)	100
10	Int16	Altitude (m)	100
11	Int16	Temperature (°C)	100
12	Int16	Heave motion (m] (optional)	1000

IpCAN Protocol

To exchange data with LPMS through the CAN Bus interface, the serial LPBUS protocol is split into CAN bus messages. We call this CAN bus wrapper for the LPBUS protocol: IpCAN.

A regular IpCAN message is structured as shown below:

11-bit CAN identifier	The CAN identifier of a CAN message. This identifier is set to
------------------------------	--

	the value "514h" for all lpCAN transmissions.
8 data bytes	Contains the actual data to be transmitted in a CAN message.

An example packet with 4 data bytes wrapping from LPBUS to lpCAN results in the following CAN messages:

CAN Message #1:

Byte #	Name	Description
0	Packet start (3Ah)	Mark of the beginning of a data packet.
1	OpenMATID byte 1	Contains the low byte of the OpenMAT ID of the sensor to be communicated with. The default value of this ID is 1. The host sends out a GET / SET request to a specific sensor by using this ID, and the client answers to request also with the same ID. This ID can be adjusted by sending a SET command to the sensor firmware.
2	OpenMAT ID byte 2	High byte of the OpenMAT ID of the sensor.
3	Command no. byte 1	Contains the low byte of the command to be performed by the data transmission.
4	Command no. byte 2	High byte of the command number.
5	Packet data length byte 1	Contains the low byte of the packet data length to be transmitted in the packet data field (in this example 4)
6	Packet data length byte 2	High byte of the data length to be transmitted (in this example 0)
7	Packet data	Packet data byte 0

CAN Message #2:

Byte #	Name	Description
0	Packet data	Packet data byte 1
1	Packet data	Packet data byte 2
2	Packet data	Packet data byte 3
3	LRC byte 1	The low byte of LRC check-sum.
4	LRC byte 2	High byte of LRC check-sum.
5	Termination byte 1	0Dh

6	Termination byte 2	0Ah
7	Not used	0

The number of messages needed to contain the data depends on the length of the data to be transmitted. Each CAN message is 8 bytes long. Unused bytes of a message are filled with 0.

CANopen and Sequential CAN Protocol

In CANopen and sequential CAN transmission mode, two or more output words of measurement data can be assigned to a CAN channel. In sequential CAN mode the channel addressing can be individually controlled. In CANopen mode, 4 TPDO (Transmission Data Process Object) messages and a heartbeat message are transmitted. Sensor data is assigned to specific messages either using the LpmsControl application or direct LPBUS communication.

Data is continuously sent from the sensor to the host with the streaming frequency selected in the LpmsControl application at the selected baudrate. The data to be transmitted can be selected to adjust the bus bandwidth used by the LPMS system.

NOTE: In CANopen mode a **heartbeat message** is transmitted with a frequency between 0.1 Hz and 2 Hz.

The format of CANopen and Sequential CAN bus messages is controlled by the following parameters:

- **Channel mode**
- **Value mode**
- **Start ID:**
- **IMU ID**

In CANopen mode, the message base address is calculated in the following way:

$$\text{Base CAN ID} = \text{Start ID} + \text{IMU ID}$$

In sequential CAN mode, the message base address is calculated in the following way:

$$\text{Base CAN ID} = \text{Start ID} + (\text{IMU ID} - 1) * 8$$

Therefore, using these parameters the following message formats can be adjusted:

Parameter settings	Resulting channel message setup
Channel mode = Sequential	CAN message #1:

<p>Value mode = 16-bit fixed point (signed) Start ID = 514h IMU ID = 1</p>	<p>CAN ID = 514h, CAN data: 1st 16 bits: Channel 1 data 2nd 16 bits: Channel 2 data 3rd 16 bits: Channel 3 data 4th 16 bits: Channel 4 data</p> <p>CAN message #2: CAN ID = 515h, CAN data: 1st 16 bits: Channel 5 data 2nd 16 bits: Channel 6 data 3rd 16 bits: Channel 7 data 4th 16 bits: Channel 8 data</p> <p>CAN message #3 CAN ID = 516h, CAN data: 1st 16 bits: Channel 9 data 2nd 16 bits: Channel 10 data 3rd 16 bits: Channel 11 data 4th 16 bits: Channel 12 data</p> <p>CAN message #4: CAN ID = 517h, CAN data: 1st 16 bits: Channel 13 data 2nd 16 bits: Channel 14 data 3rd 16 bits: Channel 15 data 4th 16 bits: Channel 16 data</p>
<p>Channel mode = Sequential Value mode = 32-bit floating point Start ID = 514h IMU ID = 1</p>	<p>CAN message #1: CAN ID = 514h, CAN data: 1st 32 bits: Channel 1 data 2nd 32 bits: Channel 2 data</p>

	<p>CAN message #2: CAN ID = 515h, CAN data: 1st 32 bits: Channel 3 data 2nd 32 bits: Channel 4 data</p> <p>CAN message #3: CAN ID = 516h, CAN data: 1st 32 bits: Channel 5 data 2nd 32 bits: Channel 6 data</p> <p>CAN message #4: CAN ID = 517h, CAN data: 1st 32 bits: Channel 7 data 2nd 32 bits: Channel 8 data</p> <p>CAN message #5: CAN ID = 518h, CAN data: 1st 32 bits: Channel 9 data 2nd 32 bits: Channel 10 data</p> <p>CAN message #6: CAN ID = 519h, CAN data: 1st 32 bits: Channel 11 data 2nd 32 bits: Channel 12 data</p> <p>CAN message #7: CAN ID = 51Ah, CAN data: 1st 32 bits: Channel 13 data 2nd 32 bits: Channel 14 data</p>
--	--

	<p>CAN message #8: CAN ID = 51Bh, CAN data: 1st 32 bits: Channel 15 data 2nd 32 bits: Channel 16 data</p>
<p>Channel mode = CANopen Value mode = 16-bit fixed point (signed) Start ID = 180h IMU ID = 1</p>	<p>CAN message #1: CAN ID = 181h, CAN data: 1st 16 bits: Channel 1 data 2nd 16 bits: Channel 2 data 3rd 16 bits: Channel 3 data 4th 16 bits: Channel 4 data</p> <p>CAN message #2: CAN ID = 281h, CAN data: 1st 16 bits: Channel 5 data 2nd 16 bits: Channel 6 data 3rd 16 bits: Channel 7 data 4th 16 bits: Channel 8 data</p> <p>CAN message #3 CAN ID = 381h, CAN data: 1st 16 bits: Channel 9 data 2nd 16 bits: Channel 10 data 3rd 16 bits: Channel 11 data 4th 16 bits: Channel 12 data</p> <p>CAN message #4: CAN ID = 481h, CAN data: 1st 16 bits: Channel 13 data 2nd 16 bits: Channel 14 data</p>

	<p>3rd 16 bits: Channel 15 data 4th 16 bits: Channel 16 data</p>
<p>Channel mode = CANopen Value mode = 32-bit floating point Start ID = 180h IMU ID = 1</p>	<p>CAN message #1: CAN ID = 181h, CAN data: 1st 32 bits: Channel 1 data 2nd 32 bits: Channel 2 data</p> <p>CAN message #2: CAN ID = 281h, CAN data: 1st 32 bits: Channel 3 data 2nd 32 bits: Channel 4 data</p> <p>CAN message #3: CAN ID = 381h, CAN data: 1st 32 bits: Channel 5 data 2nd 32 bits: Channel 6 data</p> <p>CAN message #4: CAN ID = 481h, CAN data: 1st 32 bits: Channel 7 data 2nd 32 bits: Channel 8 data</p> <p>CAN message #5: CAN ID = 581h, CAN data: 1st 32 bits: Channel 9 data 2nd 32 bits: Channel 10 data</p> <p>CAN message #6: CAN ID = 681h, CAN data:</p>

	<p>1st 32 bits: Channel 11 data 2nd 32 bits: Channel 12 data</p> <p>CAN message #7: CAN ID = 781h, CAN data: 1st 32 bits: Channel 13 data 2nd 32 bits: Channel 14 data</p> <p>CAN message #8: CAN ID = 881h, CAN data: 1st 32 bits: Channel 15 data 2nd 32 bits: Channel 16 data...</p>
--	--

Transmitted units **in 32-bit float mode:**

Data type	Unit
Angular speed (gyroscope)	radians/s
Acceleration (accelerometer)	g
Magnetic field strength (magnetometer)	μ T
Euler angle	radians
Linear acceleration	g
Quaternion	normalized units

In 16-bit integer modes values are multiplied with a constant factor after transmission to increase precision:

Data type	Unit	Factor
Angular speed (gyroscope)	radians/s	1000
Acceleration (accelerometer)	g	1000
Magnetic field strength (magnetometer)	μ T	100
Euler angle	radians	1000
Linear acceleration	g	1000
Quaternion	normalized units	1000

VIII. OpenMAT LIBRARY

Overview

Introduction

The OpenMAT (Open motion analysis toolkit) is the software package delivered with an LPMS device. The package contains the basic hardware device drivers for the sensors, a C++ library to easily access the functionality of the IMUs and various other examples and utility programs. Except for our proprietary algorithms the library is open-source. This includes the firmware of the LPMS devices. OpenMAT consists of the following components:

Core applications

LpSensor: The core library to manage communication with LPMS devices

LpmsControl: An application to control and use LPMS devices

LpMocap: Full-body human motion capture application

Programming examples

LpmsSimpleExample: A simple example on how to use the LpSensor library

LpmsSanAngeles: Virtual reality application using an LPMS device for viewpoint control in a 3D environment

LpmsBNativeAndroidLibrary: Java application for acquiring data from LPMS-B on an Android device

Support components

OpenMATInstaller: Script to build a Windows installer based on NSIS

LpSensorCWrapper: C language wrapper for LpSensor

LpSensorCWrapperTest: Simple test application for C language wrapper

LpmsTimingAnalyzer: Analyzes timing consistency of an LPMS

Sensor firmware

LpmsFirmware: Open-source version of the LPMS firmware

LpmsIAP: In-application programmer for the LPMS

OpenMAT is available as binary release and as source code release. If you would like to use the included applications in their original form, please use the binary release. This is suggested as the easiest way to start because it allows you to easily test the functionality of your sensor. The source

code of OpenMAT is available from the LP-RESEARCH Bitbucket repository:
<https://bitbucket.org/lpresearch/openmat>

Application Installation under Windows

Please follow the steps below to install an OpenMAT binary release under Windows. The binary release includes the OpenMAT API pre-compiled for Windows 32-bit.

1. Download the latest OpenMAT installer from
<http://www.lp-research.com/support/>
2. Start OpenMAT-x.x.x-Setup.exe (x.x.x being the latest version number)
3. Follow the displayed installation instructions

LpmsControl Software Operation

Overview

The LpmsControl application allows users to control various aspects of an LPMS device. In particular the application has the following core functionality:

- List all LPMS devices connected to the system
- Connect to up to 256 sensors simultaneously
- Adjust all sensor parameters (sensor range etc.).
- Set orientation offsets
- Initiate accelerometer, gyroscope and magnetometer calibration.
- Display the acquired data in real-time either as line graphs or a 3D image
- Record data from the sensors to a CSV data file
- Play back data from a previously recorded CSV file
- Upload new firmware and in-application-programming software to the sensor

GUI Elements

Toolbar Items

The key functionality of LpmsControl can be accessed via the toolbar. See an overview of the toolbar in Figure 7, Figure 8, Figure 9 and Figure 10.

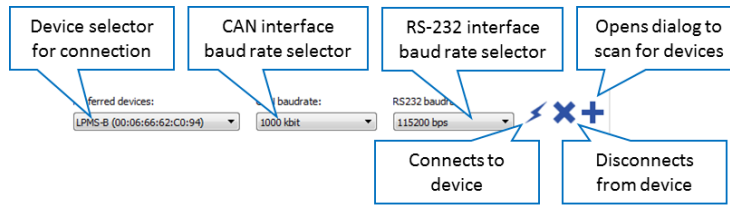


Figure 7 - Connection toolbar

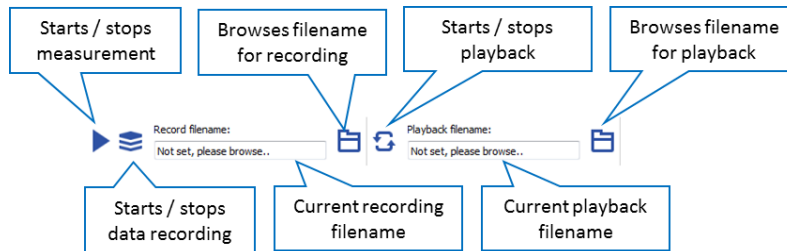


Figure 8 - Recording and playback toolbar

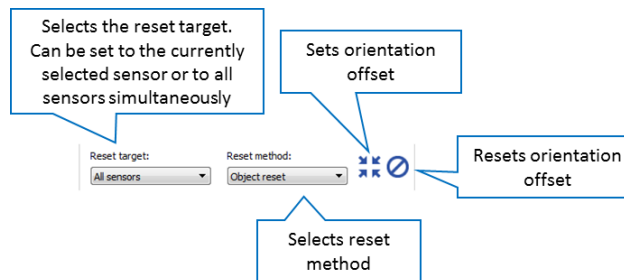


Figure 9 - Orientation offset toolbar

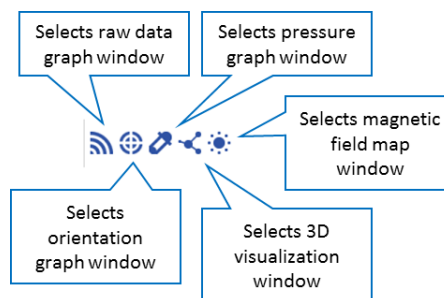


Figure 20 - Window selector

Menu Items

Menu title	Menu item	Operation
Connect menu		
	Connect	Connects to sensor selected in "Preferred

		devices" list
	Disconnect	Disconnects sensor currently selected in "Connected devices" list
	Add / remove sensor	Opens "Scan devices" dialog
	Exit program	Exits the application
Measurement menu		
	Stop measurement	Toggles measurement
	Browse record file	Opens browser for selecting a file for data recording
	Record data	Toggles data recording
	Browse replay file	Opens browser for selecting a playback file
	Playback data	Starts data playback
Calibration menu		
	Calibrate gyroscope	Starts manual gyroscope calibration
	Calibrate mag. (ellipsoid fit)	Starts magnetometer calibration wizard for ellipsoid fit calibration
	Calibrate mag. (min/max fit)	Starts magnetometer calibration wizard for min/max fit calibration
	Save parameters to sensor	Saves parameters to sensor flash memory
	Save calibration file	Saves file with calibration data
	Load calibration file	Loads file with calibration data

	Set offset	Sets sensor orientation offset (depending on "Reset target" and "Reset method")
	Reset offset	Resets sensor orientation offset (depending on "Reset target")
	Arm timestamp reset	Arms hardware timestamp reset
	Reset to factory settings	Resets sensor settings to factory default
View		
	Graph window	Selects raw data graph window
	Orientation window	Selects orientation graph window
	Pressure window	Selects pressure graph window
	3D visualization	Selects 3D visualization window
	3D view mode 1	Selects view mode 1
	3D view mode 2	Selects view mode 2
	3D view mode 4	Selects view mode 4
	Load object file	Loads 3D OBJ file
Advanced		
	Upload firmware	Uploads firmware file
	Upload IAP	Uploads in-application-programmer file
	Start self test	Starts self-test
	Calibrate acc. misalignment	Starts accelerometer calibration wizard
	Calibrate gyr. misalignment	Starts gyroscope calibration wizard

	Calibrate mag. misalignment (HH-coils)	Starts magnetometer calibration wizard (Helmholtz coils mode)
	Calibrate mag. misalignment (auto)	Starts magnetometer calibration wizard (automatic mode)
	Version info	Displays version information dialog

Connected Devices List

Devices connected to the system are shown in the Connected devices list. Through this list each sensor parameter can be adjusted according to the table below.

Top level item	Parameter item	Description
Status		
	Connection	Displays the current connection status OK: Connection successful In progress: Currently connecting Failed: Connection failed
	Sensor status	Displays the current sensor status Started: Sensor measurement is running Stopped: Sensor measurement stopped
	Device ID	Current device ID
	Firmware version	Firmware version
ID / sampling rate		
	IMU ID	Selects OpenMAT ID
	Transmission rate	Selects data transmission rate
Range		
	GYR range	Selects gyroscope range
	ACC range	Selects accelerometer range
	MAG range	Selects magnetometer range
Filter		
	Filter mode	Selects filter mode

	MAG correction	Selects magnetometer correction mode
	Lin. ACC correction	Selects linear acceleration correction mode
	Rot. ACC correction	Selects centripetal acceleration correction
	GYR threshold	Selects gyroscope threshold
	GYR autocalibration	Selects auto-calibration setting
	Low-pass filter	Selects low-pass filter setting
Data		
	LPBUS data mode	Switches between 16-bit integer or 32-bit floating point mode
	Enabled data	Selects data to be enabled for transmission from the sensor
UART (RS-232/TTL)		
	Baud rate	Selects the UART transmission baud rate
	Data format	Switches between LPBUS and ASCII format output
CAN bus		
	CAN baudrate	Selects baud rate for CAN communication
	Channel mode	Selects CAN channel mode
	Value mode	Selects CAN value mode
	Start ID	CAN start ID for sequential mode
	Heartbeat freq.	Heartbeat frequency
	Channel 1-16	CAN channel assignment

NOTE: Parameter adjustments are normally only persistent until the sensor is switched off. You can permanently save the newly adjusted parameters to the LPMS flash memory by selecting Save parameters to sensor in the Calibration menu of LpmsControl.

Scanning, Discovering and Saving Devices

Discovering devices, especially Bluetooth devices, can be quite time-consuming. Therefore LpmsControl allows scanning for devices once and then saves the device identification in a list of preferred devices. Figure 11 shows the device discovery dialog. To add a device to the preferred devices list, please follow the steps below:

1. Click "Scan devices" and wait until the scanning process is finished.
2. Select the target device from the discovered devices list
3. Click "Add device" to add the device to the Preferred devices list

4. Click Save devices to save the list of preferred devices

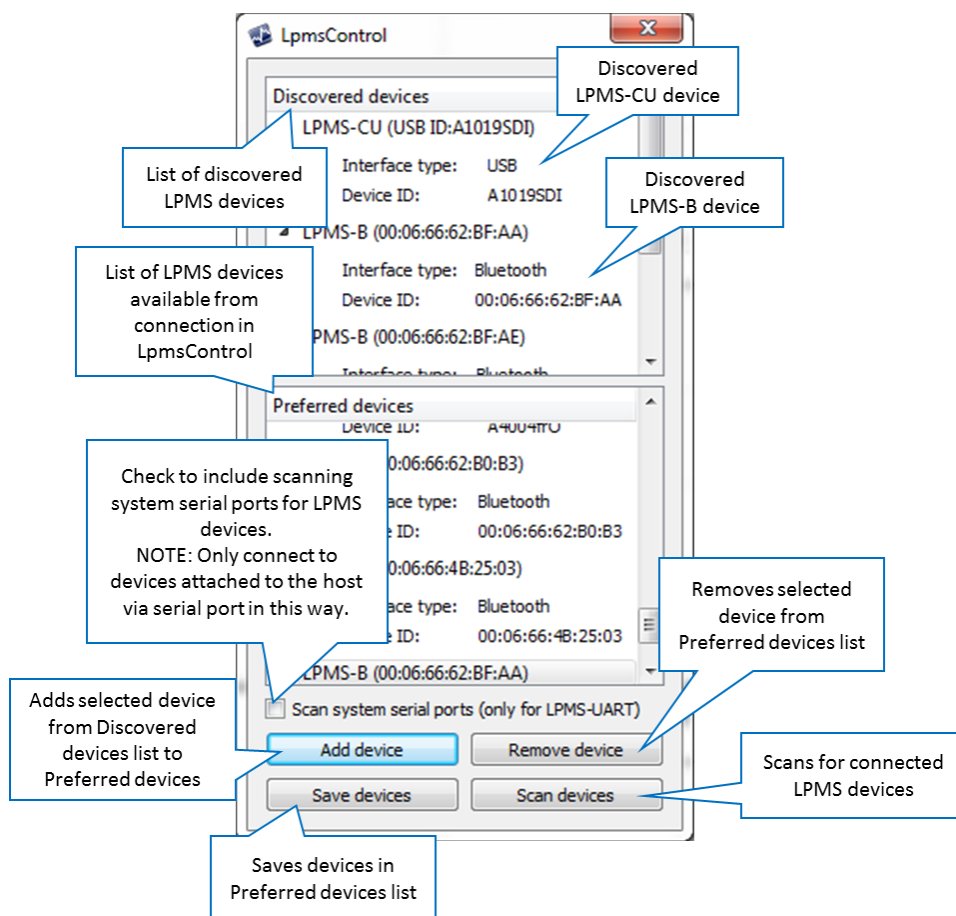


Figure 11 - Discover devices dialog

Connecting and Disconnecting a Device

To connect to an LPMS device, please follow the steps below.

1. Select device to connect to in "Preferred devices" dropdown list.
2. Click "Connect" button.
3. Sensor status should now be "Connecting..".
4. Connection establishment should take between 2 and 5 seconds.

If the connection is successful the sensor status should switch to "Connected". The sensor will start measuring automatically after connecting. Should the connection procedure fail for some reason, Failed will be displayed. If a successful connection is interrupted the connection status will change to "Connection interrupted".

→ **Applies to LPMS-B**

NOTE: Please make sure that you have no 3rd party Bluetooth driver (Toshiba, Bluesoleil etc.) installed on your system. LpmsControl uses the native Windows Bluetooth driver and any other driver will block communication with the native Windows driver. The Windows Bluetooth pairing functionality will be automatically started when connecting to the sensor from LpmsControl. A PIN code should not be required for connecting with the LPMS.

Recording and Playing Back Data

LpmsControl allows recording and playback of sensor data. Recorded data is saved in a CSV format that can be easily processed by Excel, MATLAB etc. Saved files can be loaded into LpmsControl and played back. At the moment only playback of the sensor with the lowest OpenMAT ID in the file is possible. To start data recording please follow the steps below:

1. Select "Measurement" ->"Browse record file" and choose a filename that you would like to record to.
2. Start the recording by selecting "Measurement -> Record" data.
3. Once you have collected enough data stop the recording by selecting "Measurement" ->"Stop recording".

To replay a data file do the following:

1. Select "Measurement" ->"Browse replay" file and select a file that you would like to replay.
2. Start replay by selecting "Measurement" ->"Replay data".
3. Replay will loop automatically. Once you would like to stop replay select "Measurement" ->"Stop replay data".

Switching View Modes

LpmsControl can visualize sensor orientation data either as data graphs or as 3D representation. In 3D view mode the orientation of the sensor is shown as a 3D cube. Up to 4 sensors can be shown simultaneously in one window. In this multi-view mode, which sensors are visualized can be adjusted by assigning an IMU ID to each window (see Figure 12).

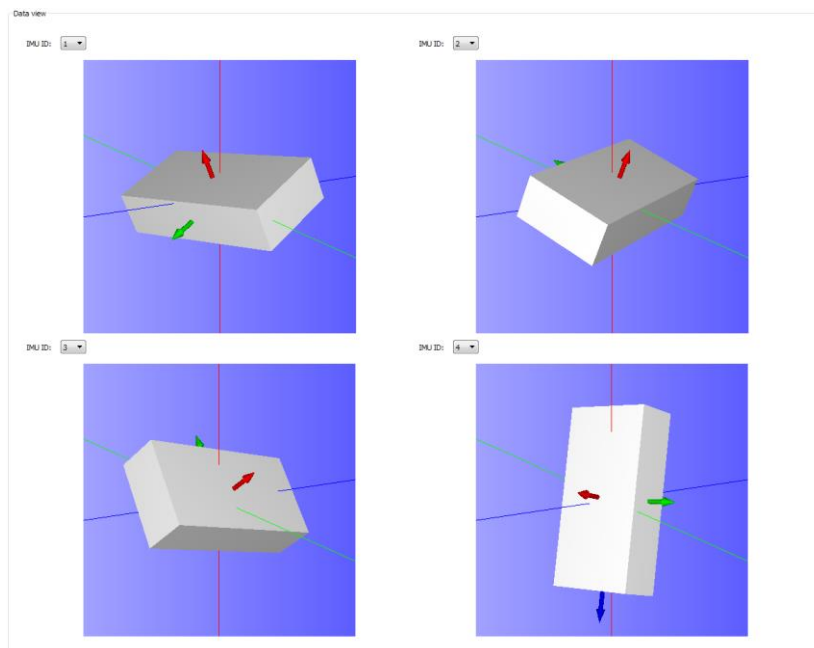


Figure 12 - Viewing the orientation of 4 connected LPMS at the same time

By selecting Load object file from the View menu, custom 3D data can be loaded into LpmsControl as shown in Figure 13.

NOTE: LpmsControl so far only supports the OBJ file format for loading 3D CAD files. We recommend exporting files in this format from the open-source 3D visualizer Meshlab: <http://meshlab.sourceforge.net/>

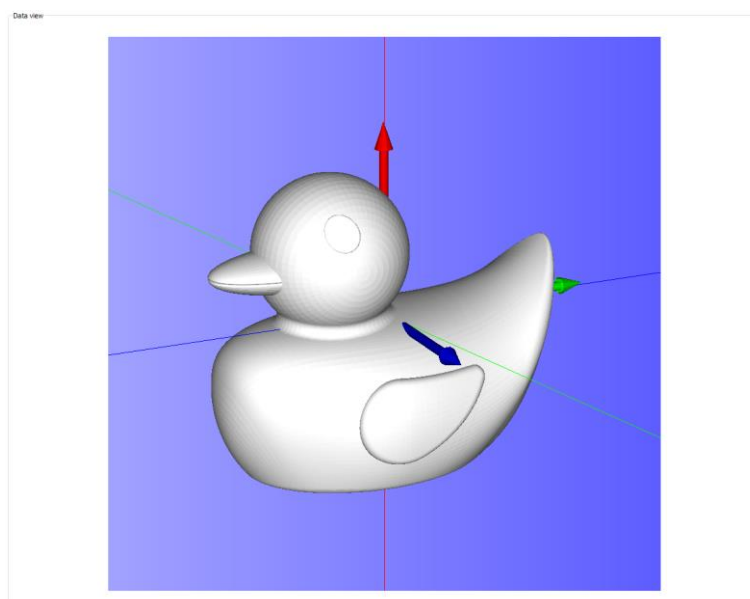


Figure 13 - Custom 3D OBJ data can be loaded into the visualization window

Uploading New Firmware

Please follow the following steps carefully when you are updating the sensor firmware. Invalid operation might result in an incomplete firmware update and brick the sensor.

1. Start your current LpmsControl software.
2. Connect to the sensor you would like to update.
3. Choose the “Save parameters to file” function from the “Calibration” menu of LpmsControl to save the current sensor calibration results into a .txt file on your local host system.
4. Select Upload firmware function in the “Advanced” menu.
5. Click OK and select the new firmware file. Be careful that you select the right file which should be named as LpmsXFirmwareX.X.X.bin (with X being the sensor type identifier and firmware version).
6. Wait for the upload process to finish. It should take around 30 seconds. At around 15s the green LED on the sensor should begin to blink rapidly (~10 Hz).
7. Disconnect from the sensor and exit LpmsControl.
8. Now install the new LpmsControl application. The previous LpmsControl application does not need to be un-installed.
9. Start LpmsControl and connect to your sensor.
10. Choose the “Load parameters fromfile” function from the “Calibration” menu of LpmsControl to recover the previous sensor calibration results.
11. Choose the “Save parameters” to sensor function from the calibration menu of LpmsControl to save the previous sensor calibration results into sensor flash.
12. The update is finished. Make sure everything works as expected.

The LpSensor Library

Building Your Application

The LpSensor library contains classes that allow a user to integrate LPMS devices into their own applications. **The standard library is a Windows 32-bit C++ library for MS Visual C++ (express) 2010.** Should you require a binary of the library to work on another operating system or 64-bit applications, please contact LP-RESEARCH.

Compiling applications that use the LpSensor library requires the following components:

Header files (usually in C:/OpenMAT/include):

LpmsSensorManagerI.h Contains the interface for the LpmsSensorManager class.

LpmsSensorI.h	Contains the interface for the LpmsSensor class
ImuData.h	Structure for containing output data from a LPMS device
LpmsDefinitions.h	Macro definitions for accessing LPMS
DeviceListItem.h	Contains the class definition for an element of a LPMS device list

LIB files (usually in C:/OpenMAT/lib/x86):

LpSensorD.lib	LpSensor library (Debug version)
LpSensor.lib	LpSensor library (Release version)

DLL files (usually in C:/OpenMAT/lib/x86):

LpSensorD.dll	LpSensor library (Debug version)
LpSensor.dll	LpSensor library (Release version)

PCANBasic.dll	PeakCAN library DLL for CAN interface communication (optional).
ftd2xx.dll	The FTDI library to communicate with an LPMS over USB.

To compile the application please do the following:

1. Include LpmsSensorManagerI.h.
2. Add LpSensor.lib (or LpSensorD.lib if you are compiling in debug mode) to the link libraries file list of your application
3. Make sure that you set a path to LpSensor.dll / LpSensorD.dll, PCANBasic.dll (optional) and ftd2xx.dll so that the runtime file of your application can access them.
4. Build your application.

Important Classes

SensorManager

The sensor manager class wraps a number of LpmsSensor instances into one class, handles device discovery and device polling. For user applications the following methods are most commonly used. Please refer to the interface file SensorManagerI.h for more information.

NOTE: An instance of LpmsSensor is returned by the static function **LpmsSensorManagerFactory()**. See the example listing in the next section for more information how to initialize an LpmsSensorManager object.

Method name	SensorManager (void)
Parameters	none

Returns	SensorManager object
Description	Constructor of a SensorManager object.

Method name	LpSensor* addSensor(int mode, string deviceId)								
Parameters	<p>mode The device type to be connected. The following device types are available:</p> <table border="1" data-bbox="671 555 1350 752"> <thead> <tr> <th>Macro</th> <th>Device type</th> </tr> </thead> <tbody> <tr> <td>DEVICE_LPMS_B</td> <td>LPMS-B</td> </tr> <tr> <td>DEVICE_LPMS_C</td> <td>LPMS-CU (CAN mode)</td> </tr> <tr> <td>DEVICE_LPMS_U</td> <td>LPMS-CU (USB mode)</td> </tr> </tbody> </table> <p>deviceId Device ID of the LPMS device. The ID is equal to the OpenMAT ID (initially set to 1, user definable).</p>	Macro	Device type	DEVICE_LPMS_B	LPMS-B	DEVICE_LPMS_C	LPMS-CU (CAN mode)	DEVICE_LPMS_U	LPMS-CU (USB mode)
Macro	Device type								
DEVICE_LPMS_B	LPMS-B								
DEVICE_LPMS_C	LPMS-CU (CAN mode)								
DEVICE_LPMS_U	LPMS-CU (USB mode)								
Returns	Pointer to LpSensor object.								
Description	Adds a sensor device to the list of devices administered by the SensorManager object.								

Method name	void removeSensor(LpSensor *sensor)
Parameters	sensor Pointer to LpSensor object that is to be removed from the list of sensors. The call to removeSensor frees the memory associated with the LpSensor object.
Returns	none
Description	Removes a device from the list of currently administered sensors.

Method name	void listDevices(std::vector<DeviceListItem> *v)
Parameters	*v Pointer to a vector containing DeviceListItem objects with information about LPMS devices that have been discovered by the method.
Returns	None
Description	Lists all connected LPMS devices. The device discovery runs in a separate thread. For Bluetooth devices should take several seconds to be added to the devicelist. CAN bus and USB devices should be added after around 1s.

LpmsSensor

This is a class to access the specific functions and parameters of an LPMS. The most commonly

used methods are listed below. Please refer to the interface file LpmSensorI.h for more information.

Method name	void run(void)
Parameters	None
Returns	None
Description	Starts the data acquisition procedure.

Method name	void pause(void)
Parameters	None
Returns	None
Description	Pauses the data acquisition procedure.

Method name	int getSensorStatus(void)												
Parameters	None												
Returns	<p>Sensor state identifier:</p> <table border="0"> <thead> <tr> <th>Macro</th> <th>Sensor state</th> </tr> </thead> <tbody> <tr> <td>SENSOR_STATUS_PAUSED</td> <td>Sensor is currently paused.</td> </tr> <tr> <td>SENSOR_STATUS_RUNNING</td> <td>Sensor is currently acquiring data.</td> </tr> <tr> <td>SENSOR_STATUS_CALIBRATING</td> <td>Sensor is currently calibrating.</td> </tr> <tr> <td>SENSOR_STATUS_ERROR</td> <td>Sensor has detected an error.</td> </tr> <tr> <td>SENSOR_STATUS_UPLOADING</td> <td>Sensor is currently receiving new firmware data.</td> </tr> </tbody> </table>	Macro	Sensor state	SENSOR_STATUS_PAUSED	Sensor is currently paused.	SENSOR_STATUS_RUNNING	Sensor is currently acquiring data.	SENSOR_STATUS_CALIBRATING	Sensor is currently calibrating.	SENSOR_STATUS_ERROR	Sensor has detected an error.	SENSOR_STATUS_UPLOADING	Sensor is currently receiving new firmware data.
Macro	Sensor state												
SENSOR_STATUS_PAUSED	Sensor is currently paused.												
SENSOR_STATUS_RUNNING	Sensor is currently acquiring data.												
SENSOR_STATUS_CALIBRATING	Sensor is currently calibrating.												
SENSOR_STATUS_ERROR	Sensor has detected an error.												
SENSOR_STATUS_UPLOADING	Sensor is currently receiving new firmware data.												
Description	Retrieves the current sensor status.												

Method name	int getConnectionStatus(void)
Parameters	None

Returns	<p>Connection status identifier:</p> <table border="0"> <tr> <td>Macro</td> <td>Sensor state</td> </tr> <tr> <td>SENSOR_CONNECTION_CONNECTED</td> <td>Sensor is connected.</td> </tr> <tr> <td>SENSOR_CONNECTION_CONNECTING</td> <td>Connection is currently being established.</td> </tr> <tr> <td>SENSOR_CONNECTION_FAILED</td> <td>Attempt to connect has failed.</td> </tr> <tr> <td>SENSOR_CONNECTION_INTERRUPTED</td> <td>Connection has been interrupted.</td> </tr> </table>	Macro	Sensor state	SENSOR_CONNECTION_CONNECTED	Sensor is connected.	SENSOR_CONNECTION_CONNECTING	Connection is currently being established.	SENSOR_CONNECTION_FAILED	Attempt to connect has failed.	SENSOR_CONNECTION_INTERRUPTED	Connection has been interrupted.
Macro	Sensor state										
SENSOR_CONNECTION_CONNECTED	Sensor is connected.										
SENSOR_CONNECTION_CONNECTING	Connection is currently being established.										
SENSOR_CONNECTION_FAILED	Attempt to connect has failed.										
SENSOR_CONNECTION_INTERRUPTED	Connection has been interrupted.										
Description	Retrieves the current connection status.										

Method name	void startResetReference (void)
Parameters	None
Returns	None
Description	Resets the current accelerometer and magnetometer reference. Please see the 'Operation' chapter for details on the reference vector adjustment procedure.

Method name	void startCalibrateGyro (void)
Parameters	None
Returns	None
Description	Starts the calibration of the sensor gyroscope.

Method name	void startMagCalibration (void)
Parameters	None
Returns	None
Description	Starts the calibration of the LPMS magnetometer.

Method name	CalibrationData* getConfigurationData (void)
Parameters	None
Returns	Pointer to CalibrationData object.
Description	Retrieves the CalibrationData structure containing the configuration parameters of the connected LPMS.

Method name	bool setConfigurationPrm (int parameterIndex, int
--------------------	--

	parameter)	
Parameters	parameterIndex	The parameter to be adjusted.
	parameter	The new parameter value.
	Supported parameterIndex identifiers:	
	Macro	Description
	PRM_OPENMAT_ID	Sets the current OpenMAT ID.
	PRM_FILTER_MODE	Sets the current filter mode.
	PRM_PARAMETER_SET	Changes the current filter preset.
	PRM_GYR_THRESHOLD_ENABLE	Enables / disables the gyroscope threshold.
	PRM_MAG_RANGE	Modifies the current magnetometer sensor range.
	PRM_ACC_RANGE	Modifies the current accelerometer sensor range.
	PRM_GYR_RANGE	Modifies the current gyroscope range.
	Supported parameter identifiers for each parameter index:	
	PRM_OPENMAT_ID	Integer ID number between 1 and 255.
	PRM_FILTER_MODE	
	Macro	Description
FM_GYRO_ONLY	Only gyroscope	
FM_GYRO_ACC	Gyroscope + accelerometer	
FM_GYRO_ACC_MAG_NS	Gyroscope + accelerometer + magnetometer	
PRM_PARAMETER_SET		
Macro	Description	
LPMS_FILTER_PRM_SET_1	Magnetometer correction “dynamic” setting.	
LPMS_FILTER_PRM_SET_2	Strong	
LPMS_FILTER_PRM_SET_3	Medium	

	See setConfigurationPrm method for an explanation of supported parameter indices and parameters.
Returns	None
Description	Retrieves a configuration parameter.

Method name	void resetOrientation(void)
Parameters	None
Returns	None
Description	Resets the orientation offset of the sensor.

Method name	void saveCalibrationData(void)
Parameters	None
Returns	None
Description	Starts saving the current parameter settings to the sensor flash memory.

Method name	virtual void getCalibratedSensorData(float g[3], float a[3], float b[3])
Parameters	g[0..2] Calibrated gyroscope data (x, y, z-axis). a[0..2] Calibrated accelerometer data (x, y, z-axis). b[0..2] Calibrated magnetometer data (x, y, z-axis).
Returns	None
Description	Retrieves calibrated sensor data (gyroscope, accelerometer, magnetometer).

Method name	virtual void getQuaternion(float q[4])
Parameters	q[0..3] Orientation quaternion (qw, qx, qy, qz)
Returns	None
Description	Retrieves the 3d orientation quaternion.

Method name	virtual void getEulerAngle(float r[3])
Parameters	r[0..2] Euler angle vector (around x, y, z-axis)
Returns	None
Description	Retrieves the currently measured 3d Euler angles.

Method name	virtual void getRotationMatrix(float M[3][3])
--------------------	--

Parameters	M[0..2][0..2] Rotations matrix (row i=0..2, column j=0..2)
Returns	None
Description	Retrieves the current rotation matrix.

Example Code (C++)

Connecting to the an LPMS device

```
#include "stdio.h"

#include "LpmsSensorI.h"
#include "LpmsSensorManagerI.h"

int main(int argc, char *argv[])
{
    ImuData d;

    // Gets a LpmsSensorManager instance
    LpmsSensorManagerI* manager = LpmsSensorManagerFactory();

    // Connects to LPMS-B sensor with address 00:11:22:33:44:55
    LpmsSensorI* lpms = manager->addSensor(DEVICE_LPMS_B, "00:11:22:33:44:55");

    while(1) {
        // Checks, if conncted
        if (lpms->getConnectionStatus() == SENSOR_CONNECTION_CONNECTED) {

            // Reads quaternion data
            d = lpms->getCurrentData();

            // Shows data
            printf("Timestamp=%f, qW=%f, qX=%f, qY=%f, qZ=%f\n", d.timeStamp,
                d.q[0], d.q[1], d.q[2], d.q[3]);
        }
    }

    // Removes the initialized sensor
    manager->removeSensor(lpms);
}
```

```
        // Deletes LpmsSensorManager object
        delete manager;

        return 0;
    }
}
```

Setting and Retrieval of Sensor Parameters

```
/* Setting a sensor parameter. */
lpmsDevice->setParameter(PRM_ACC_RANGE, LPMS_ACC_RANGE_8G);

/* Retrieving a sensor parameter. */
lpmsDevice->setParameter(PRM_ACC_RANGE, &p);
```

Sensor and Connection Status Inquiry

```
/* Retrieves current sensor status */
int status = getSensorStatus();

switch (status) {
case SENSOR_STATUS_RUNNING:
    std::cout << "Sensor is running." << std::endl;
break;

case SENSOR_STATUS_PAUSED:
    std::cout << "Sensor is paused." << std::endl;
break;
}

status = lpmsDevice->getConnectionStatus();

switch (status) {
case SENSOR_CONNECTION_CONNECTING:
    std::cout << "Sensor is currently connecting." << std::endl;
break;

case SENSOR_CONNECTION_CONNECTED:
```

```
        std::cout << "Sensor is connected." << std::endl;
break;
}
```

IX. APPENDIX

Appendix A –COMMON CONVERSION ROUTINES

Conversion Quaternion to Matrix

```

typedef struct _LpVector3f {
    float data[3];
} LpVector3f;

typedef struct _LpVector4f {
    float data[4];
} LpVector4f;

typedef struct _LpMatrix3x3f {
    float data[3][3];
} LpMatrix3x3f;

void quaternionToMatrix(LpVector4f *q, LpMatrix3x3f* M)
{
    float tmp1;
    float tmp2;

    float sqw = q->data[0] * q->data[0];
    float sqx = q->data[1] * q->data[1];
    float sqy = q->data[2] * q->data[2];
    float sqz = q->data[3] * q->data[3];

    float invs = 1 / (sqx + sqy + sqz + sqw);

    M->data[0][0] = ( sqx - sqy - sqz + sqw) * invs;
    M->data[1][1] = (-sqx + sqy - sqz + sqw) * invs;
    M->data[2][2] = (-sqx - sqy + sqz + sqw) * invs;

    tmp1 = q->data[1] * q->data[2];
    tmp2 = q->data[3] * q->data[0];

    M->data[1][0] = 2.0f * (tmp1 + tmp2) * invs;

```

```

M->data[0][1] = 2.0f * (tmp1 - tmp2) * invs;

tmp1 = q->data[1] * q->data[3];
tmp2 = q->data[2] * q->data[0];

M->data[2][0] = 2.0f * (tmp1 - tmp2) * invs;
M->data[0][2] = 2.0f * (tmp1 + tmp2) * invs;

tmp1 = q->data[2] * q->data[3];
tmp2 = q->data[1] * q->data[0];

M->data[2][1] = 2.0f * (tmp1 + tmp2) * invs;
M->data[1][2] = 2.0f * (tmp1 - tmp2) * invs;
}

```

Conversion Quaternion to Euler Angles (ZYX rotation sequence)

```

void quaternionToEuler(LpVector4f *q, LpVector3f *r)
{
    // ZYX Rotation sequence
    const float r2d = 57.2958f;
    float w = q->data[0];
    float x = q->data[1];
    float y = q->data[2];
    float z = q->data[3];

    float r11 = 2 * (x*y + w*z);
    float r12 = w*w + x*x - y*y - z*z;
    float r21 = -2 * (x*z - w*y);
    float r31 = 2 * (y*z + w*x);
    float r32 = w*w - x*x - y*y + z*z;

    r->data[2] = (float)atan2(r11, r12) * r2d;
    r->data[1] = (float)asin(r21) * r2d;
    r->data[0] = (float)atan2(r31, r32) * r2d;
}

```


Appendix B – LPBUS Protocol Command List

Acknowledged and Not-acknowledged Identifiers

Identifier: 0
Name: REPLY_ACK
Description: Confirms a successful SET command.

Identifier: 1
Name: REPLY_NACK
Description: Reports an error during processing a SET command.

Firmware Update and In-Application-Programmer Upload Commands

Identifier: 2
Name: UPDATE_FIRMWARE
Description: Start the firmware update process.
 NOTE: By not correctly uploading a firmware file the sensor might become in-operable. Please only use authorized firmware packages.
Packet data: Firmware data
Data format: Firmware binary file separated into 256 byte chunks for each update packet.
Response: ACK (success) or NACK (error) for each transmitted packet.

Identifier: 3
Name: UPDATE_IAP
Description: Start the in-application programmer (IAP) update process.
Packet data: IAP data
Data format: IAP binary file separated into 256 byte chunks for each update packet.
Response: ACK (success) or NACK (error) for each transmitted packet.

Configuration and Status Commands

Identifier: 4
Name: GET_CONFIG
Description: Get the current value of the configuration register of the sensor. The

configuration word is read-only. The different parameters are set by their respective SET commands. E.g. SET_TRANSMIT_DATA for defining which data is transmitted from the sensor.

Packet data: Configuration word. Each bit represents the state of one configuration parameter.

Data format: 32-bit integer

Bit	Reported State / Parameter
0 - 2	Stream frequency setting (see SET_STREAM_FREQ)
3 - 8	Reserved
9	Pressure data transmission enabled (optional)
10	Magnetometer data transmission enabled
11	Accelerometer data transmission enabled
12	Gyroscope data transmission enabled
13	Temperature output enabled (optional)
14	Heave motion output enabled (optional)
15	Reserved
16	Angular velocity output enabled
17	Euler angle data transmission enabled
18	Quaternion orientation output enabled
19	Altitude output enabled (optional)
20	Dynamic magnetometer correction enabled
21	Linear acceleration output enabled
22	16-bit data output mode enabled
23	Gyroscope threshold enabled
24	Magnetometer compensation enabled
25	Accelerometer compensation enabled
26	Reserved
27	Reserved
28	Reserved
29	Reserved
30	Gyroscope auto-calibration enabled
31	Reserved

Identifier: 5

Name: GET_STATUS

Description: Get the current value of the status register of the LPMS device. The status word is read-only.

Packet data: Status indicator. Each bit represents the state of one status parameter.

Data format: 32-bit integer

Bit	Indicated state
0	COMMAND mode enabled
1	STREAM mode enabled
2	Reserved
3	Gyroscope calibration on
4	Reserved
5	Gyroscope initialization failed
6	Accelerometer initialization failed
7	Magnetometer initialization failed
8	Pressure sensor initialization failed
9	Gyroscope unresponsive
10	Accelerometer unresponsive
11	Magnetometer unresponsive
12	Flash write failed
13	Reserved
14	Set streaming frequency failed
15-31	reserved

Mode Switching Commands

Identifier: 6

Name: GOTO_COMMAND_MODE

Description: Switch to command mode. In command mode the user can issue commands to the firmware to perform calibration, set parameters etc.

Response: ACK (success) or NACK (error)

Identifier: 7

Name: GOTO_STREAM_MODE

Description: Switch to streaming mode. In this mode data is continuously streamed from

the sensor, and all other commands cannot be performed until the sensor receives the GOTO_COMMAND_MODE command.

Response: ACK (success) or NACK (error)

Data Transmission Commands

Identifier: 9

Name: GET_SENSOR_DATA

Description: Retrieves the latest set of sensor data. A data packet will be composed as defined by SET_TRANSMIT_DATA. The currently set format can be retrieved with the sensor configuration word.

Data format: See the LPBUS protocol explanation for a description of the measurement data format.

Identifier: 10

Name: SET_TRANSMIT_DATA

Description: Set the data that is transmitted from the sensor in streaming mode or when retrieving data through the GET_SENSOR_DATA command.

Packet data: Data selection indicator

Data format: 32-bit integer.

Bit	Reported State / Parameter
9	Pressure data transmission enabled
10	Magnetometer data transmission enabled
11	Accelerometer data transmission enabled
12	Gyroscope data transmission enabled
13	Temperature output enabled
14	Heave motion output enabled
16	Angular velocity output enabled
17	Euler angle data transmission enabled
18	Quaternion orientation output enabled
19	Altitude output enabled
21	Linear acceleration output enabled

Response: ACK (success) or NACK (error)

Identifier: 11
Name: SET_STREAM_FREQ
Description: Set the timing in which streaming data is sent to the host. Please note that high frequencies might be not practically applicable due to limitations of the communication interface. Check the current baudrate before setting this parameter.
Packet data: Update frequency identifier
Data format: 32-bit integer

Frequency (Hz)	Identifier
5	5
10	10
30	30
50	50
100	100
200	200
300	300
500	500

Response: ACK (success) or NACK (error)

Identifier: 75
Name: SET_LPBUS_DATA_MODE
Description: Sets current data mode for LP-BUS (binary) output.
Packet data: Data mode identifier
Data format: Int32

Data mode	Identifier
32-bit float	0
16-bit integer	1

Response: ACK (success) or NACK (error)

Identifier: 66
Name: RESET_TIMESTAMP
Description: Sets current sensor timestamp

Packet data: Timestamp data (in 0.1 ms units)
Data format: Int32
Response: ACK (success) or NACK (error)

Identifier: 83
Name: SET_ARM_HARDWARE_TIMESTAMP_RESET
Description: Arms hardware timestamp reset
Packet data: None
Response: ACK (success) or NACK (error)

Register Value Save and Reset Command

Identifier: 15
Name: WRITE_REGISTERS
Description: Write the currently set parameters to flash memory.
Response: ACK (success) or NACK (error)

Identifier: 16
Name: RESTORE_FACTORY_VALUE
Description: Reset the LPMS parameters to factory default values. Please note that upon issuing this command your currently set parameters will be erased.
Response: ACK (success) or NACK (error)

Reference Setting and Offset Reset Command

Identifier: 18
Name: SET_OFFSET
Description: Sets the orientation offset using one of the three offset methods.

Orientation offset mode

Mode	Value
Object reset	0
Heading reset	1
Alignment reset	2

Packet data:
Data format:
Response: ACK (success) or NACK (error)

Identifier: 82
Name: RESET_ORIENTATION_OFFSET
Description: Reset the orientation offset to 0 (unity quaternion).
Response: ACK (success) or NACK (error)

Self-Test Command

Identifier: 19
Name: SELF_TEST
Description: Initiate the self-test. During the self test the sensor automatically rotates about the three room axes. To simulate realistic circumstances an artificial offset is applied to the magnetometer and the gyroscope values.
Response: ACK (success) or NACK (error)

IMU ID Setting Command

Identifier: 20
Name: SET_IMU_ID
Description: Set the OpenMAT ID.
Packet data: OpenMAT ID
Data format: 32-bit integer
Response: ACK (success) or NACK (error)

Identifier: 21
Name: GET_IMU_ID
Description: Get the ID (OpenMAT ID) of the device.
Packet data: The ID of the IMU device
Return format: 32-bit integer

Gyroscope Settings Command

Identifier: 22

Name: START_GYR_CALIBRATION
Description: Start the calibration of the gyroscope sensor.
Response: ACK (success) or NACK (error)

Identifier: 23
Name: ENABLE_GYR_AUTOCAL
Description: Enable or disable auto-calibration of the gyroscope.
Packet data: Gyroscope auto-calibration enable / disable identifier
Format: 32-bit integer

State	Value
Disable	0x00000000
Enable	0x00000001

Response: ACK (success) or NACK (error)

Identifier: 24
Name: ENABLE_GYR_THRES
Description: Enable or disable gyroscope threshold.
Packet data: Gyroscope threshold enable / disable identifier
Format: 32-bit integer

State	Value
Disable	0x00000000
Enable	0x00000001

Response: ACK (success) or NACK (error)

Identifier: 25
Name: SET_GYR_RANGE
Description: Set the current range of the gyroscope.
Packet data: Gyroscope range identifier
Format: 32-bit integer

Range (deg/s)	Identifier
250	250
500	500

Response:

2000	2000
------	------

ACK (success) or NACK (error)

Identifier: 26
Name: GET_GYR_RANGE
Description: Get current gyroscope range.
Response: Gyroscope range indicator
Return format: 32-bit integer

Identifier: 48
Name: SET_GYR_ALIGN_BIAS
Description: Set gyroscope alignment bias.
Packet data: Gyroscope alignment bias
Format: Float 3-vector
Response: ACK (success) or NACK (error)

Identifier: 49
Name: GET_GYR_ALIGN_BIAS
Description: Get gyroscope alignment bias.
Response: Gyroscope alignment bias
Return format: Float 3-vector

Identifier: 50
Name: GET_GYR_ALIGN_MATRIX
Description: Set gyroscope alignment matrix.
Packet data: Gyroscope alignment matrix
Format: Float 3x3 matrix
Response: ACK (success) or NACK (error)

Identifier: 51
Name: GET_GYR_ALIGN_MATRIX

Description: Get gyroscope alignment matrix.
Response: Gyroscope alignment matrix
Return format: Float 3x3 matrix

Accelerometer Settings Command

Identifier: 27
Name: SET_ACC_BIAS
Description: Set the accelerometer bias.
Packet data: Accelerometer bias (X, Y, Z-axis)
Format: 32-bit integer encoded float 3-component vector
Response: ACK (success) or NACK (error)

Identifier: 28
Name: GET_ACC_BIAS
Description: Get the current accelerometer bias vector.
Response: Accelerometer bias vector
Return format: 32-bit integer encoded float 3-component vector

Identifier: 29
Name: SET_ACC_ALIG
Description: Set the accelerometer alignment matrix.
Packet data: Alignment matrix
Format: 32-bit integer encoded float 3 x 3 matrix
Response: ACK (success) or NACK (error)

Identifier: 30
Name: GET_ACC_ALIG
Description: Get the current accelerometer alignment matrix.
Response: Accelerometer alignment matrix
Return format: 32-bit integer encoded float 3 x 3 matrix

Identifier: 31
Name: SET_ACC_RANGE
Description: Set the current range of the accelerometer.
Packet data: Accelerometer range identifier
Format: 32-bit integer

Range	Identifier
2g	2
4g	4
8g	8
16g	16

Response: ACK (success) or NACK (error)

Identifier: 32
Name: GET_ACC_RANGE
Description: Get current accelerometer range.
Response: Accelerometer range indicator
Return format: 32-bit integer

Magnetometer Settings Command

Identifier: 33
Name: SET_MAG_RANGE
Description: Set the current range of the magnetometer.
Packet data: Magnetometer range identifier
Format: 32-bit integer

Response:

Range	Identifier
130 uT	130
190 uT	190
250 uT	250
400 uT	400
470 uT	470
560 uT	560
810 uT	810

Identifier: 34
Name: GET_MAG_RANGE
Description: Get current magnetometer range.
Response: Magnetometer range indicator (same as above)
Return format: 32-bit integer

Identifier: 35
Name: SET_HARD_IRON_OFFSET
Description: Set the current hard iron offset vector.
Packet data: Hard iron offset values
Format: 32-bit integer encoded 3-element float vector
Response: ACK (success) or NACK (error)

Identifier: 36
Name: GET_HARD_IRON_OFFSET
Description: Get current hard iron offset vector.
Response: Hard iron offset values
Return format: 32-bit integer encoded 3-element float vector

Identifier: 37
Name: SET_SOFT_IRON_MATRIX
Description: Set the current soft iron matrix.
Packet data: Soft iron matrix values
Format: 32-bit integer encoded 9-element (3x3) float matrix
Response: ACK (success) or NACK (error)

Identifier: 38
Name: GET_SOFT_IRON_MATRIX
Description: Get the current soft iron matrix.
Response: Soft iron matrix values
Return format: 32-bit integer encoded 9-element (3x3) float matrix

Identifier: 39
Name: SET_FIELD_ESTIMATE
Description: Set the current earth magnetic field strength estimate.
Packet data: Field estimate value in uT
Format: 32-bit integer encoded float
Response: ACK (success) or NACK (error)

Identifier: 40
Name: GET_FIELD_ESTIMATE
Description: Get the current earth magnetic field strength estimate.
Response: Field estimate value in uT
Return format: Int32

Identifier: 76
Name: SET_MAG_ALIGNMENT_MATRIX
Description: Sets the magnetometer misalignment matrix.
Packet data: Misalignment matrix
Format: Matrix3x3f
Response: ACK (success) or NACK (error)

Identifier: 77
Name: SET_MAG_ALIGNMENT_BIAS
Description: Sets the magnetometer misalignment bias.
Packet data: Misalignment bias
Format: Vector3f
Response: ACK (success) or NACK (error)

Identifier: 78
Name: SET_MAG_REFERENCE
Description: Sets the magnetometer reference vector.
Packet data: Misalignment matrix

Format: Vector3f
Response: ACK (success) or NACK (error)

Identifier: 79
Name: GET_MAG_ALIGNMENT_MATRIX
Description: Gets magnetometer misalignment matrix.
Response: Misalignment matrix
Return format: Matrix3x3f

Identifier: 80
Name: GET_MAG_ALIGNMENT_BIAS
Description: Gets magnetometer misalignment bias.
Response: Misalignment bias
Return format: Vector3f

Identifier: 81
Name: GET_MAG_REFERENCE
Description: Gets magnetometer reference.
Response: Magnetometer reference vector
Return format: Vector3f

Filter Settings Command

Identifier: 41
Name: SET_FILTER_MODE
Description: Set the sensor filter mode.
Packet data: Mode identifier
Format: 32-bit integer

Mode	Value
Gyroscope only	0x00000000
Accelerometer + gyroscope	0x00000001
Accelerometer+ gyroscope+ magnetometer	0x00000002
Accelerometer +	0x00000003

Magnetometer (Euler angle based filtering)	
Accelerometer + Gyroscope (Euler angle-based filtering)	0x00000004

Response: ACK (success) or NACK (error)

Identifier: 42
Name: GET_FILTER_MODE
Description: Get the currently selected filter mode.
Response: Filter mode identifier
Return format: 32-bit integer

Mode	Value
Gyroscope only	0x00000000
Accelerometer + gyroscope	0x00000001
Accelerometer + gyroscope + magnetometer	0x00000002

Identifier: 43
Name: SET_FILTER_PRESET
Description: Set one of the filter parameter presets.
Packet data: Magnetometer correctionstrength preset identifier
Format: 32-bit integer

Response:

Preset	Value
Dynamic	0x00000000
Strong	0x00000001
Medium	0x00000002
Weak	0x00000003

Identifier: 44
Name: GET_FILTER_PRESET
Description: Get the currently magnetometer correction strength preset
Response: Magnetometer correctionstrength preset identifier
Return format: 32-bit integer

Correction strength	Value
---------------------	-------

Dynamic	0x00000000
Strong	0x00000001
Medium	0x00000002
Weak	0x00000003

Identifier: 60
Name: SET_RAW_DATA_LP
Description: Set raw data low-pass
Packet data: Low pass strength
Format: Float

Cutoff frequency	Value
Off	0x00000000
40 Hz	0x00000001
20 Hz	0x00000002
4 Hz	0x00000003
2 Hz	0x00000004
0.4 Hz	0x00000005

Response: ACK (success) or NACK (error)

Identifier: 61
Name: GET_RAW_DATA_LP
Description: Get raw data low-pass
Response: Low pass strength
Return format: Float

Identifier: 67
Name: SET_LIN_ACC_COMP_MODE
Description: Sets linear acceleration compensation mode.
Packet data: Mode identifier
Format: 32-bit integer
Response: ACK (success) or NACK (error)

Identifier: 68
Name: GET_LIN_ACC_COMP_MODE
Description: Gets linear acceleration compensation mode.
Response: Mode identifier
Return format: 32-bit integer

Identifier: 69
Name: SET_CENTRI_COMP_MODE
Description: Sets centripetal acceleration compensation mode.
Packet data: Mode identifier
Format: 32-bit integer
Response: ACK (success) or NACK (error)

Identifier: 70
Name: GET_CENTRI_COMP_MODE
Description: Gets centripetal acceleration compensation mode.
Response: Mode identifier
Return format: 32-bit integer

UART Settings Commands

➔ **Applies to LPMS-CU, LPMS-CURS, LPMS-UARTAL**

Identifier: 84
Name: SET_UART_BAUDRATE
Description: Sets the current UART baud rate.
Packet data: Baud rate data
Format: Int32

Baud rate	Identifier
19200	0
57600	1
115200	2
921600	3

Response: ACK (success) or NACK (error)

Identifier: 85
Name: GET_UART_BAUDRATE
Description: Gets current UART baud rate.
Response: Baud rate identifier
Return format: 32-bit integer

Identifier: 86
Name: SET_UART_FORMAT
Description: Sets UART communication format,
Packet data: Communication format identifier
Format: Int32

Format	Identifier
Binary	0
ASCII	1

Response: ACK (success) or NACK (error)

CAN Bus Settings Command

→ Applies to LPMS-CU, LPMS-CURS, LPMS-CANAL

Identifier: 46
Name: SET_CAN_BAUDRATE
Description: Sets CAN baud rate.
Packet data: Baud rate identifier
Format: Int32

Correction strength	Value
10Kbit/s	0x00
20Kbit/s	0x08
50Kbit/s	0x10
125Kbit/s	0x18
250Kbit/s	0x20
500Kbit/s	0x28

800Kbit/s	0x30
1Mbit/s	0x38

Response: ACK (success) or NACK (error)

Identifier: 62
Name: SET_CAN_MAPPING
Description: Sets CANopen data format mapping.
Packet data: The mapping data consists of 8 integer words. Each of these words represents the assignment of half a CANopen transmission object / message (TPDO) to specific sensor data.
Format: Int32
Response: ACK (success) or NACK (error)

Identifier: 63
Name: GET_CAN_MAPPING
Description: Gets CANopen mapping.
Response: Mapping identifier
Return format: Int32

Identifier: 64
Name: SET_CAN_HEARTBEAT
Description: Sets CANopen heartbeat frequency
Packet data: Frequency identifier
Format: Int32

Heartbeat frequency	Identifier
5Hz	0x00000000
1Hz	0x00000001
0.5Hz	0x00000002
0.2Hz	0x00000003
0.1Hz	0x00000004

Response: ACK (success) or NACK (error)

Identifier: 65
Name: GET_CAN_HEARTBEAT
Description: Gets CAN heartbeat frequency
Response: Int32

Heartbeat frequency	Identifier
5Hz	0x00000000
1Hz	0x00000001
0.5Hz	0x00000002
0.2Hz	0x00000003
0.1Hz	0x00000004

Return format: ACK (success) or NACK (error)

Identifier: 71
Name: GET_CAN_CONFIGURATION
Description: Sets the current CAN channel mode.
Response: Channel mode identifier
Return format: Int32

Channel mode	Identifier
Sequential mode	0x00000001
CANopen mode	0x00000002

Identifier: 72
Name: SET_CAN_CHANNEL_MODE
Description: Sets the current CAN channel mode.
Packet data: Channel mode identifier
Format: Int32

Channel mode	Identifier
Sequential mode	0x00000001
CANopen mode	0x00000002

Response: ACK (success) or NACK (error)

Identifier: 73
Name: SET_CAN_POINT_MODE

Description: Sets the current CAN point mode.

Packet data: Point mode identifier

Format: Int32

Response:

Channel mode	Identifier
32-bit float mode	0x00000001
16-bit integer mode	0x00000002

ACK (success) or NACK (error)

Identifier: 74

Name: SET_CAN_START_ID

Description: Sets current CAN message start ID.

Packet data: Start ID

Format: Int32

Response: ACK (success) or NACK (error)

APPENDIX C – SOFTWARE REVISION HISTORY

Version 1.3.3

SW: Added functionality to load 3D CAD data in OBJ format.

Version 1.3.2

FW: BUGFIX! Major overhaul of sensor timing.

FW: Speed optimization of sensor fusion algorithm.

Version 1.3.1

FW: Added ASCII CSV output option for UART models.

Version 1.3.0

FW / SW: Added hardware synchronization functionality.

FW / SW: Added selectable orientation offset modes (object, heading, alignment).

Version 1.2.9

SW: Moved ImuData.h from OpenMATCommon to LpSensor. OpenMATCommon has been removed.

FW / SW: Switchable baud rate for UART communication. Default baud rate: 115200 bps.

FW / SW: Switchable baud rate for CAN bus communication. Default baud rate: 1 MBit/s.

Version 1.2.8

FW: BUGFIX! Newly added CAN channels now work correctly.

FW / SW: BUGFIX! Firmware upload with packet size 256 bytes now works. 128 byte for LPMS-BLE.

Version 1.2.7

FW: BUGFIX! Removed timing overhead in I2C communication with gyroscope.

SW: BUGFIX! Display update when switching sensors in LpmsControl now correct.

Version 1.2.6

SW: Added Magnetometer misalignment calibration algorithm. Calibration can either be done by comparison with acc / gyr data or using a Helmholtz coil.

SW: Added support for multiple BLE sensors.

FW: Added working firmware for BLE communication. Maximum transmission frequency is 30Hz.

Version 1.2.5

FW: Added possibility 16-bit data transfer mode for LPBUS.

SW: Added C3D file parser to LpMocap.

SW: Added AVI export functionality to LpMocap.

Version 1.2.4

SW: LpmsControl now uses QT5.

SW: LpSensor now uses C++11 for threading and therefore requires VS2012 on Windows.

SW: Updated LpMocap to support new direct network communication with LpmsControl.

SW: OpenMAT server has been deprecated.

Version 1.2.3

SW: BUGFIX! Quaternion data is now written in correct order into data file recorded by LpmsControl.

FW: Added additional acceleration compensation setting (ultra) for very strong concussions.

FW / SW: Doubled the number of available channels for CAN bus assignment (8 -> 16).

Version 1.2.2

SW: Added 3D visualization and graphs to LPMS Android application.

FW: BUGFIX! In LPMS-CURS TTL version sensor didn't switch into TTL mode on first input byte through TTL UART port.

SW: Further improvements to Android application.

Version 1.2.1

SW: Added replay functionality to LpmsControl.

SW: Added support for LPMS-CURS and LPMS-UARTAL.

FW: Adapted firmware for new LPMS-CURS.

Version 1.2.1

SW: Added support for IXXAT CAN bus interface.

FW / SW: Preliminary version of LPMS-BLE firmware and software.

SW: Removed 3rd party libraries from project.

SW: Tested compatibility with Ubuntu Linux.

SW: BUGFIX! Fixed data overflow when connecting to LPMS-B.

Version 1.2.0

FW / SW: More effective queuing of output data via Bluetooth to guarantee correct transmission.

FW / SW: LpCAN protocol was modified to enhance performance for more than one LPMS-CU on the same CAN bus. This change doesn't affect CANOpen or sequential CAN streaming.

SW: In case a transmission timeout occurs LpSensor now tries to re-connect for 5 times until it reports a transmission error.

SW: Created a C wrapper of LpSensor for use of the library with C# and Matlab.

FW: Adjusted for stronger magnetometer compensation

Version 1.1.1

SW: Improved Bluetooth device discovery

SW: Implemented checks for invalid firmware file upload

FW: BUGFIX! Fixed bug in sequential CAN bus communication.

SW: Added timestamp parsing in Android application

SW: Basic support for multiple sensors in Android application

FW / SW: Added new options to CAN bus interface (Channel mode, Value mode, Start ID). 16-bit fixed point values support.

FW / SW: Added possibility to synchronously reset timestamps for all connected sensors.

SW: BUGFIX! Fixed bug in detection of heave motion enabled sensor.

SW: Network support in OpenMAT (through ICE) has been removed for binary distributions. To build an OpenMAT network OpenMAT needs to be built from source with ICE support enabled. ICE is published under the GNU General Public License.

Version 1.1.0

SW: Added several parameter combos.

SW: Improved magnetometer calibration.

SW: Changed gyroscope calibration to use rate table.

FW: Added optional dynamic covariance adjustment for linear acceleration.

FW: Added optional dynamic covariance adjustment for rotational acceleration.

FW: Added timestamp to sensor data

FW: Added optional heave motion tracking

Version 1.0.15

SW: Moved data recording function into the library. Now managed from LpmsSensorManager. Accurate timestamp synchronization.

SW: Added barometric pressure, altimeter, temperature display.

FW: Added CAN bus protocol with fixed-point values (Custom 3).

FW: Added gyroscope calibration.

FW: Added barometric pressure, altimeter, temperature output.

Version 1.0.14

FW: Finally fixed bug that had sensor communication freeze for several seconds in some cases.

FW: Added watchdog for gyro., acc. and mag. sensor. Reboot is data acquisition hangs. Good for CAN bus critical applications.

SW: Complete configuration data write and read with each parameter change.

SW: Simplified interface a bit more.

Version 1.0.13

SW: Added icons instead of text button (toolbar).

SW: Added preferred devices dialog. Devices can be added and saved. Scan with every program start not necessary.

SW: Calibration data can be saved to an XML file. Therefore data can be backed up and restored before / after firmware update.

Version 1.0.12

SW: Magnetometer calibration calculation moved to LpmsControl to save resources.

SW: Added accelerometer misalignment calibration.

SW: Added selection of transmission data.

FW: Removed magnetometer calibration from firmware.

FW: Added custom 1 (formerly Aerospace CAN) and custom 2 CAN protocol.

Version 1.0.11

SW: Timeout for ACK and DATA was added for safety because of glitch in firmware.

SW: Linear acceleration indicator was added.

SW: Zeroing of initial IMU data was moved to LpmsSensorIo.

SW: Timeout and automatic reconnect (once) in case of connection loss.

FW: Reduced number of variables passed to filter.

FW: Added linear acceleration processing.

FW: Readjusted filter parameters (especially set mag. medium and low covariance higher). Good setting especially for medium.

Version 1.0.10

SW: Added dip angle as indicator for field noise.

SW: Added covariance adjustment for removal of linear acceleration.

SW: Gradual covariance adjustment instead of switching.

FW: Online gyroscope bias can be switched off.

FW: Factory defaults reset implemented.

Version 1.0.8

SW: Added reset to factory defaults option.

SW: Implemented different sampling rates for data recording.

SW: Added field map window to display magnetic field calibration data.

SW: Added magnetic field noise indicator.

Version 1.0.9

FW: Online gyroscope bias compensation added.

FW: Dynamic magnetometer covariance adjustment implemented.

FW: Magnetic field map read-out to host is possible.

FW: Implementation of streaming mode.

Version 1.0.7

SW: Improved Bluetooth auto-discovery.

SW: Changed “parameter set” parameter to “magnetometer correction” with “strong”, “medium” and “weak”.

Version 1.0.6

FW: Euler angles in radians are converted to degree in LpmsControl.

Version 1.0.5

SW: Adaption of GUI to new calibration routines.

SW: Added auto-calibration of magnetometer option to sensor settings.

SW: FTDI driver installation is now packaged with main installer again.

Version 1.0.4

SW: Improvement of automatic device detection routines.

SW: Centralized processing of CAN hardware I/O in CanEngine class.

SW: Interface classes for LpSensor and LpSensorManager to reduce dependencies.

Version 1.0.3

SW: Added debug and release 32-bit DLL and LIB files for the sensor data acquisition routines. Packaged classes are: SensorManager, LpmsSensor (inherits LpSensor), ImuData, CalibrationData.
SW: LpmsControl from now on uses the LpSensor library and does not build the classes by itself.
Removed the corresponding content from CMakeLists.txt

Version 1.0.3

FW: Synchronization of UART write during SPI communication in the firmware.
SW: Re-built OpenMAT to be on the safe side that everything works.

Version 1.0.2

SW: BUGFIX! Fixed very fatal dependency bug (partially depending on debug DLLs)

Version 1.0.1

SW: Automatic device discovery was added.
SW: Progress bar for device discovery was added.

Version 1.0.0

SW / FW: First release based on a series of previous in-official releases.
SW: Support for WB-4 devices has been phased out.
SW: Full support for all LPMS models (CAN, USB and Bluetooth).

APPENDIX D – MECHANICAL DIMENSIONS

LPMS-B

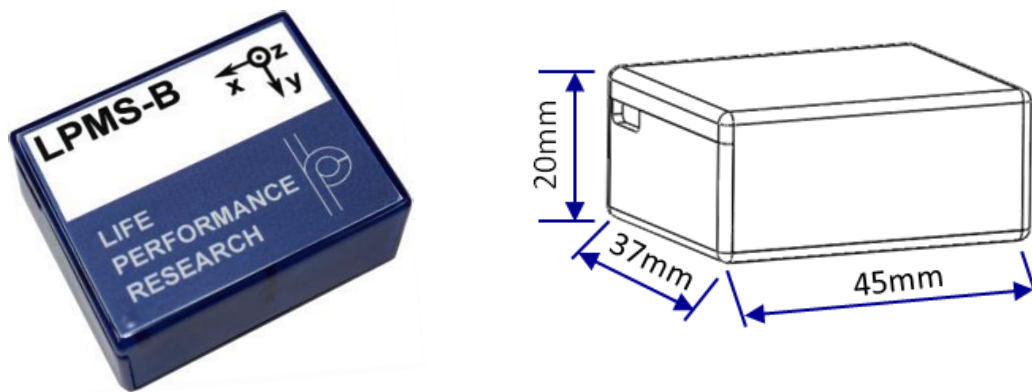


Figure 14 - LPMS-B mechanical dimensions

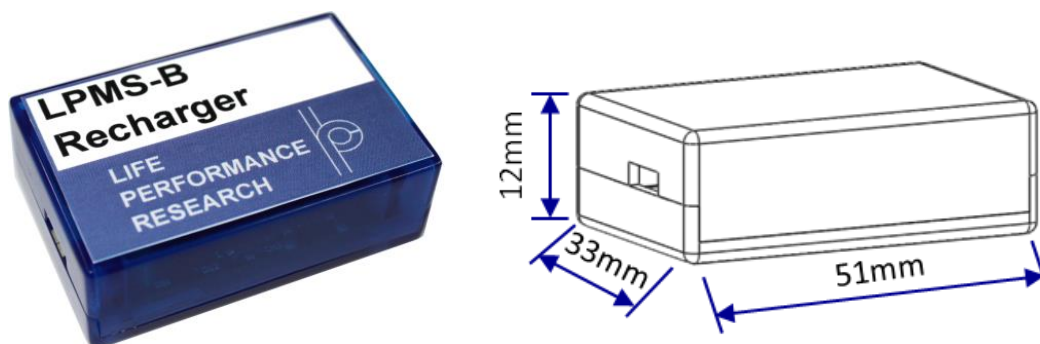


Figure 15 - LPMS-B recharger mechanical dimensions

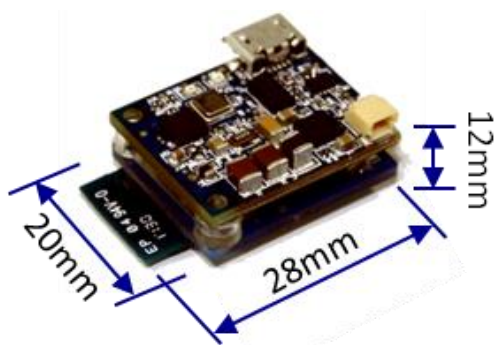


Figure 16 - LPMS-B OEM mechanical dimensions

LPMS-CU

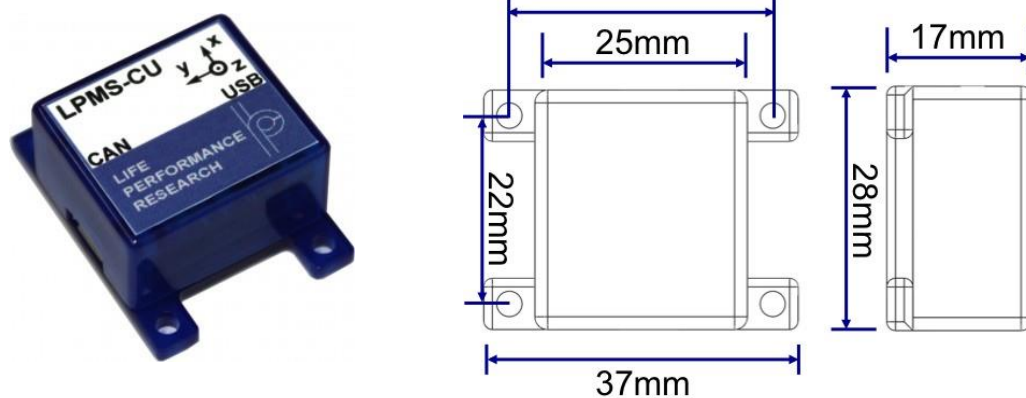


Figure 17 - LPMS-CU mechanical dimensions

LPMS-CANAL

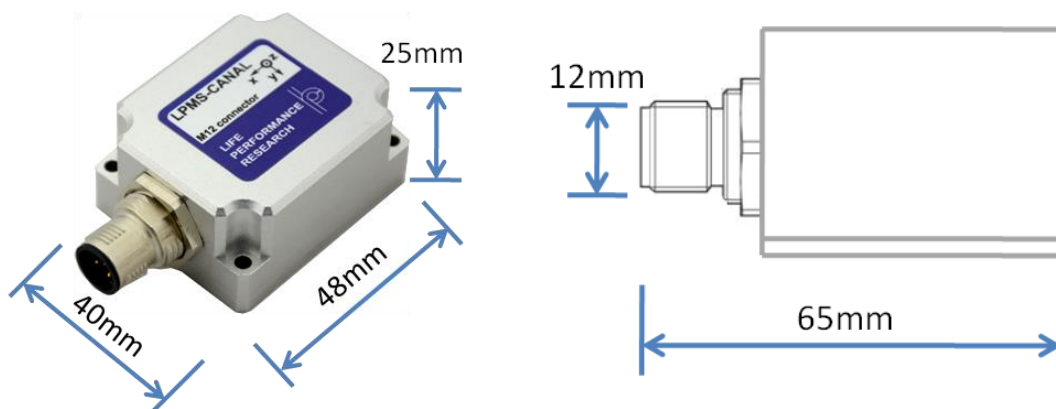


Figure 18 - LPMS-CANAL mechanical dimensions

LPMS-CURS

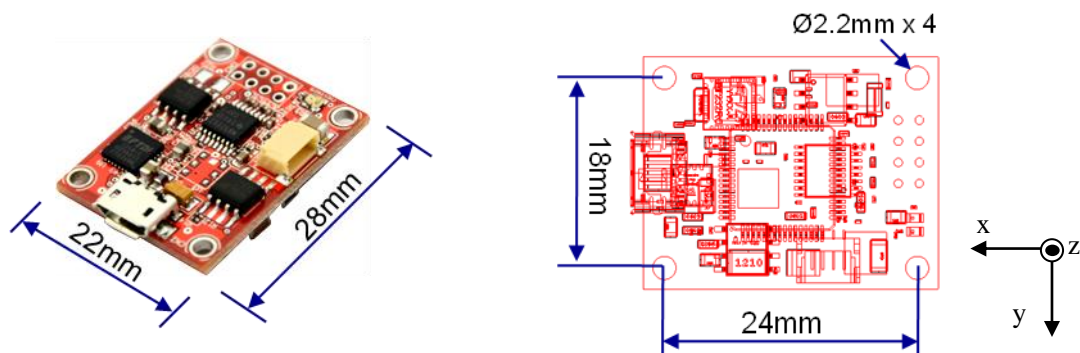


Figure 19 - LPMS-CURS mechanical dimensions

LPMS-USBAL

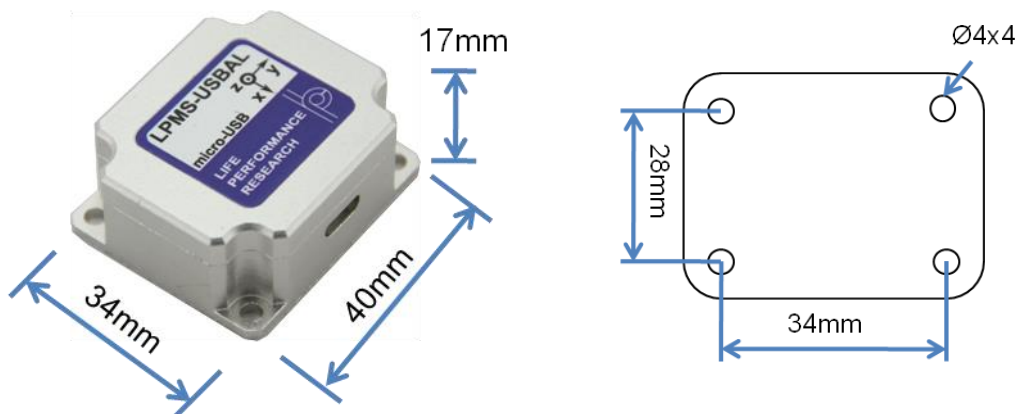


Figure 20 - LPMS-USBAL mechanical dimensions

Please Read Carefully:

Information in this document is provided solely in connection with LP-RESEARCH products. LP-RESEARCH reserves the right to make changes, corrections, modifications or improvements, to this document, and the products and services described herein at any time, without notice.

All LP-RESEARCH products are sold pursuant to LP-RESEARCH's terms and conditions of sale.

Purchasers are solely responsible for the choice, selection and use of the LP-RESEARCH products and services described herein, and LP-RESEARCH assumes no liability whatsoever relating to the choice, selection or use of the LP-RESEARCH products and services described herein.

UNLESS OTHERWISE SET FORTH IN LP-RESEARCH'S TERMS AND CONDITIONS OF SALE LP-RESEARCH DISCLAIMS ANY EXPRESS OR IMPLIED WARRANTY WITH RESPECT TO THE USE AND/OR SALE OF LP-RESEARCH PRODUCTS INCLUDING WITHOUT LIMITATION IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE (AND THEIR EQUIVALENTS UNDER THE LAWS OF ANY JURISDICTION), OR INFRINGEMENT OF ANY PATENT, COPYRIGHT OR OTHER INTELLECTUAL PROPERTY RIGHT.

LP-RESEARCH PRODUCTS ARE NOT RECOMMENDED, AUTHORIZED OR WARRANTED FOR USE IN MILITARY, AIR CRAFT, SPACE, LIFE SAVING, OR LIFE SUSTAINING APPLICATIONS, NOR IN PRODUCTS OR SYSTEMS WHERE FAILURE OR MALFUNCTION MAY RESULT IN PERSONAL INJURY, DEATH, OR SEVERE PROPERTY OR ENVIRONMENTAL DAMAGE. LP-RESEARCH PRODUCTS WHICH ARE NOT SPECIFIED AS "AUTOMOTIVE GRADE" MAY ONLY BE USED IN AUTOMOTIVE APPLICATIONS AT USER'S OWN RISK.

© 2014LP-RESEARCH - All rights reserved

Tokyo – Guangzhou – Munich

www.lp-research.com